

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Handleiding voor de montage

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzione di montaggio

 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž




Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

36-4531P-82-000

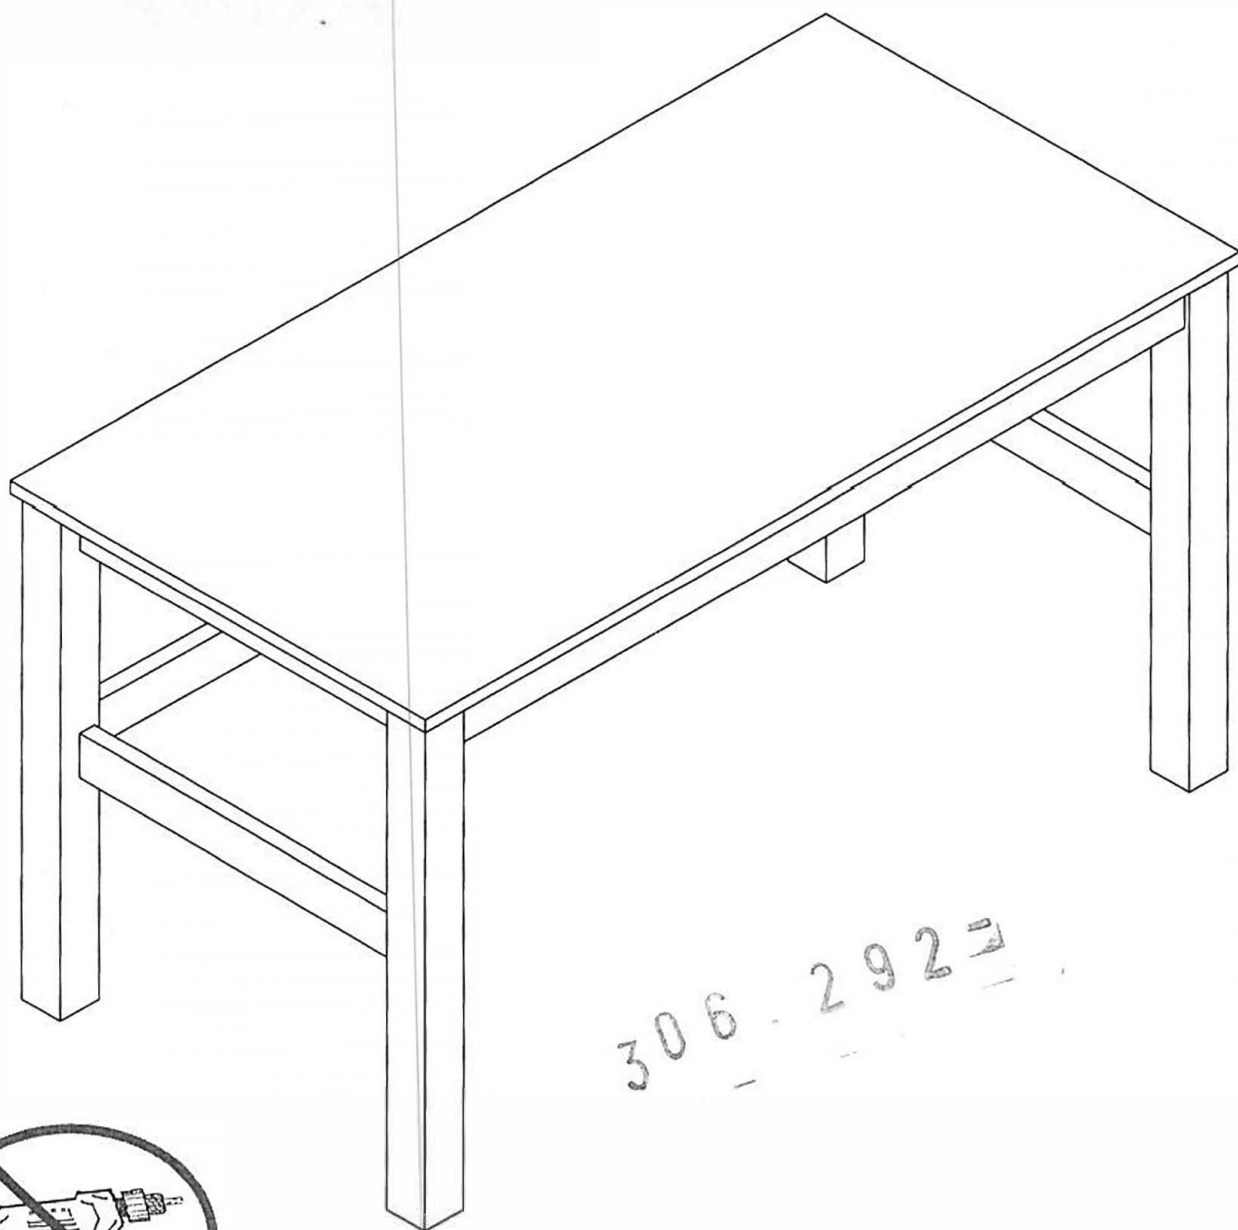

306-2922

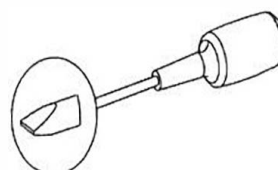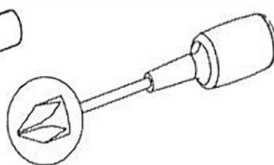  
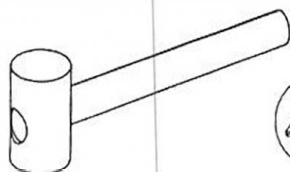 


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба






Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

  Typ • Type • Tip • Tipus • Druh • Тіро • Тип

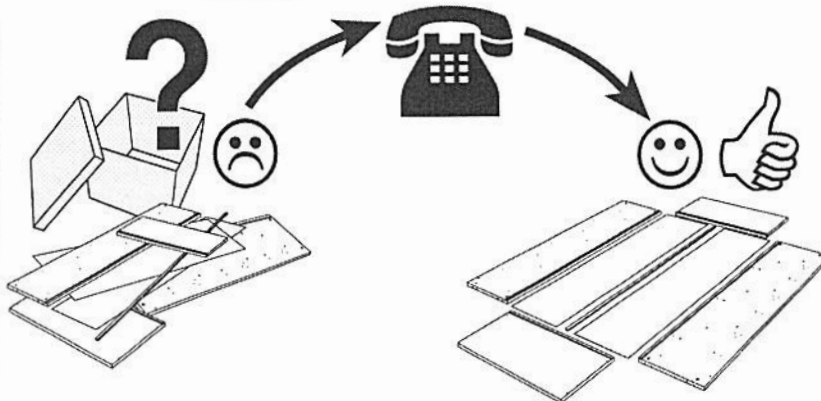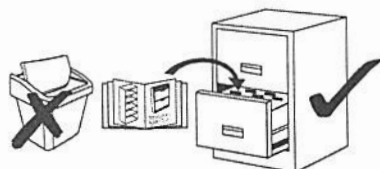

①	020001-82	x1
②	020002-32	x1
③	020003-32	x1
④	020004-32	x1
⑤	020005-32	x1
⑥	020006-32	x2
⑦	020007-32	x2
⑧	020008-32	x2
⑨	020009-32	x1

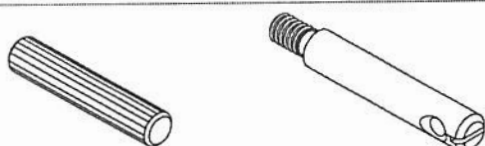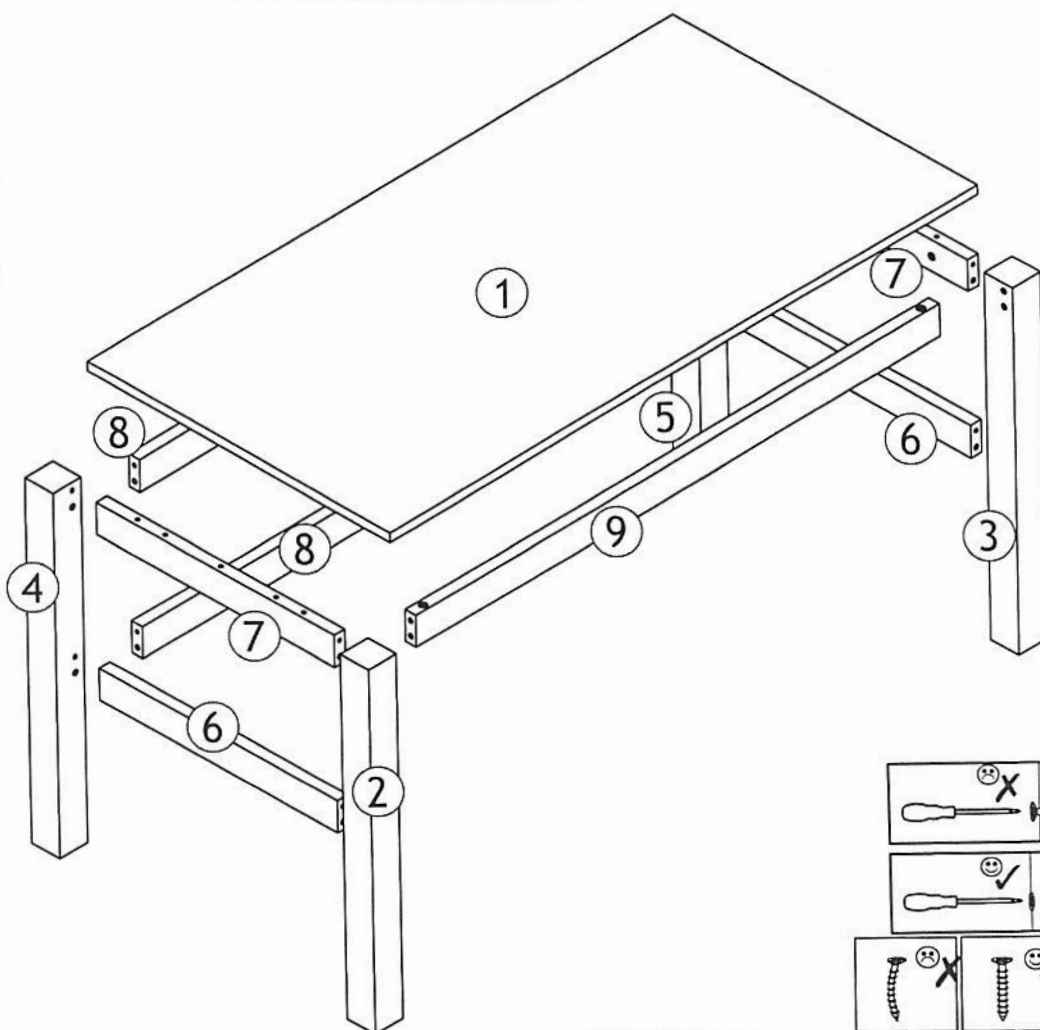     

(a)



(b)



(c)



(d)



(e)




(f)


		mm	
(a)	1-000013-00	8x40	x16
(b)	1-000084-07	10x46	x16
(c)	1-000085-07	16x20	x16
(d)	1-000086-07	M10x14	x16
(e)	1-000046-07	6x34	x6
(f)	1-000048-07	15x12	x6

 1-000001-



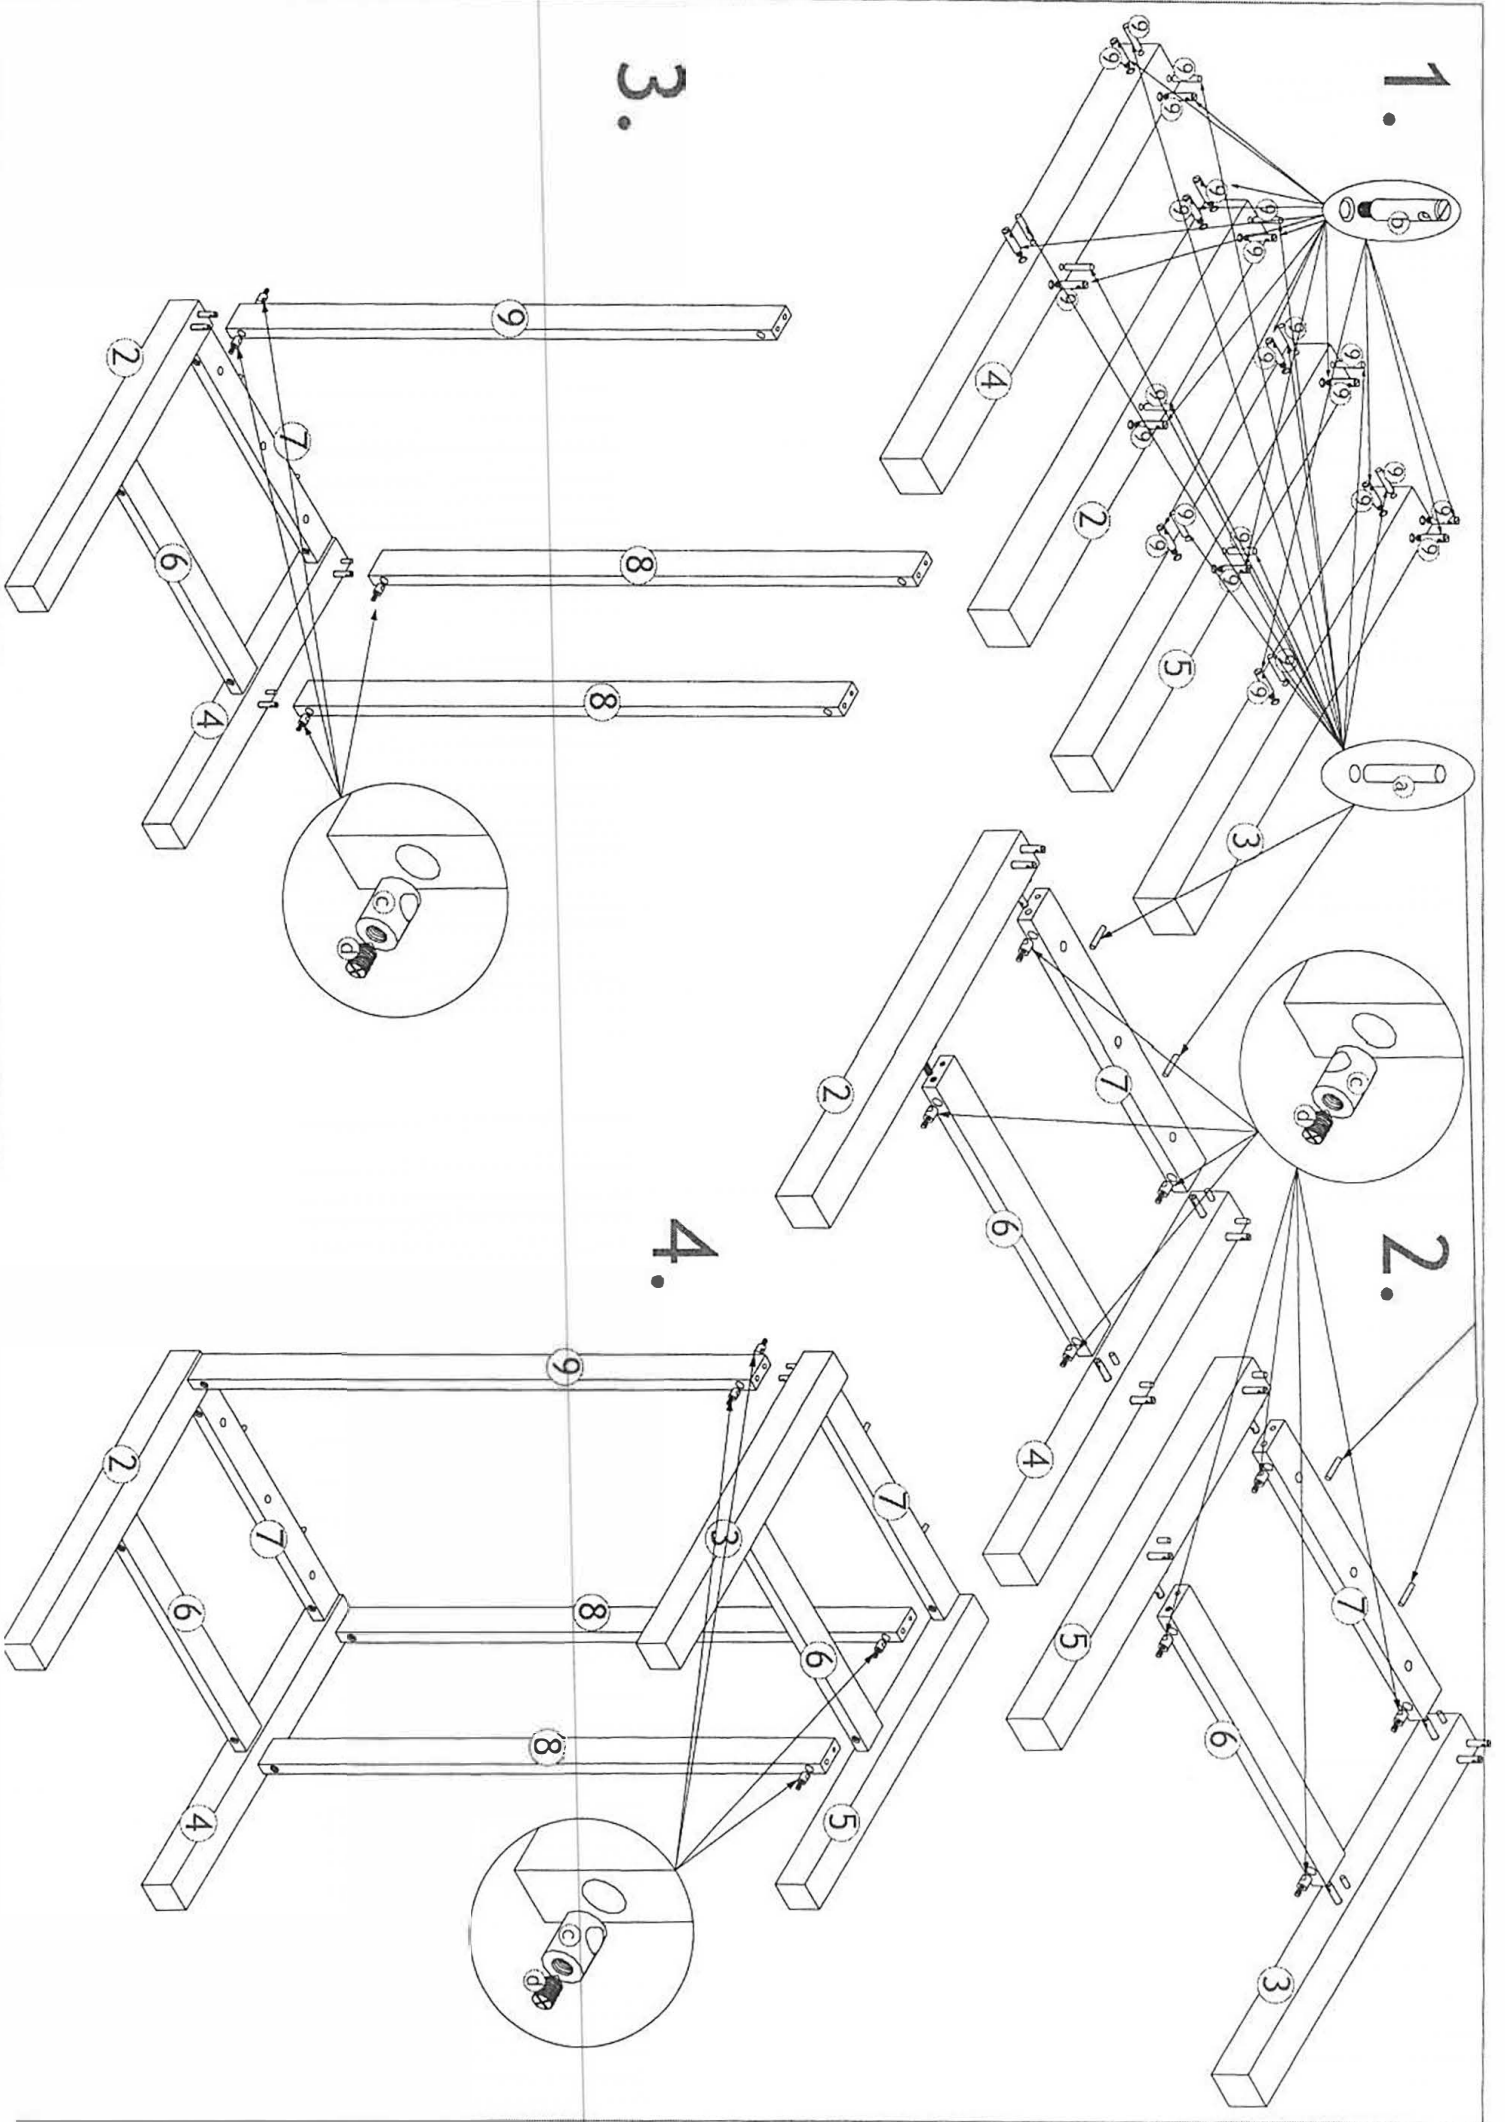

 5.

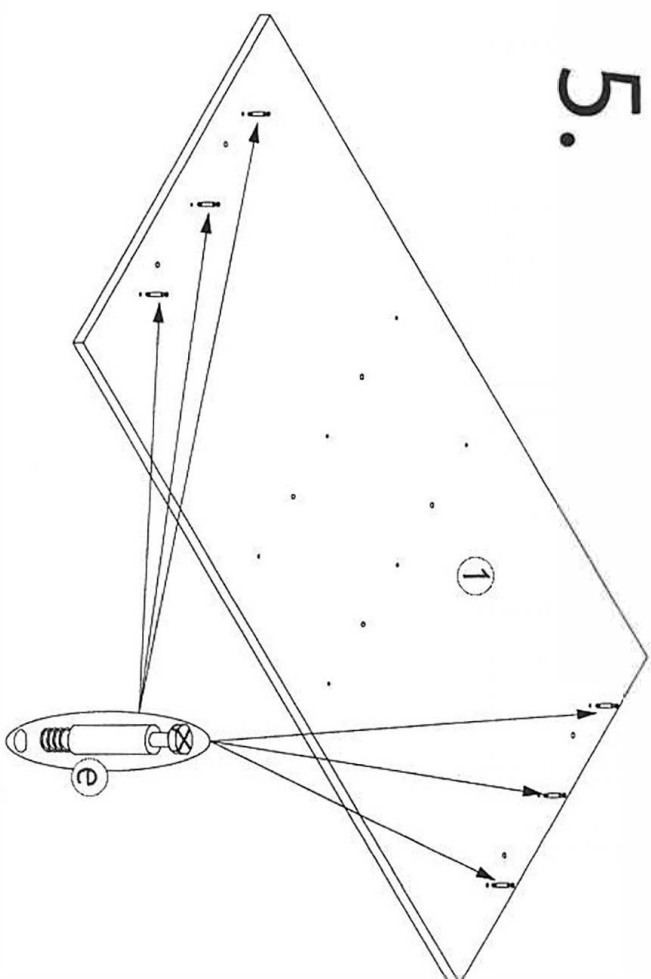

6.

