 


Assembly instruction F5EL3 without gas lift

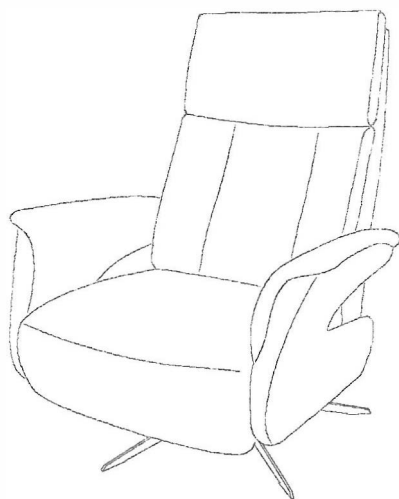

 
- The chair can only be used by children at least 8 years of age. People with reduced physical and intellectual abilities as well as people who don't have the knowledge nor experience of how to operate the chair can only use it under supervision or after being instructed how to use the chair in a safe way, so that all of the dangers are understandable for them.
- Children are not allowed to play with the chair.
- Children are not allowed to carry out the cleaning nor maintenance of the chair.
- The chair may only be used with the supplied power adapter
- The chair may only be powered from a network 220-230 VAC 50 Hz UE; 110-120 VAC 60 Hz USA.



Scan QR code to watch
movie on video platform




Scan QR code to watch
battery assembly

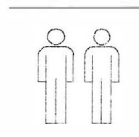


two people

 Components of the chair:

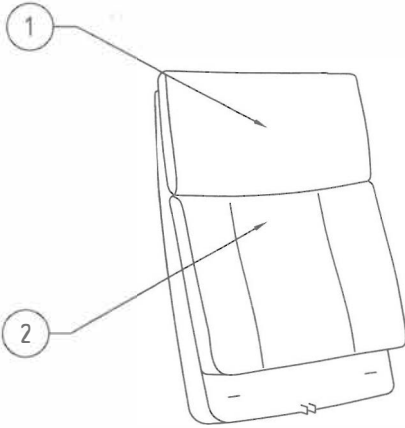

 
1. Headrest
2. Backrest
3. Right armrest
4. Left armrest
5. Control panel
6. Seat
7. Footrest
8. Central part
9. Base

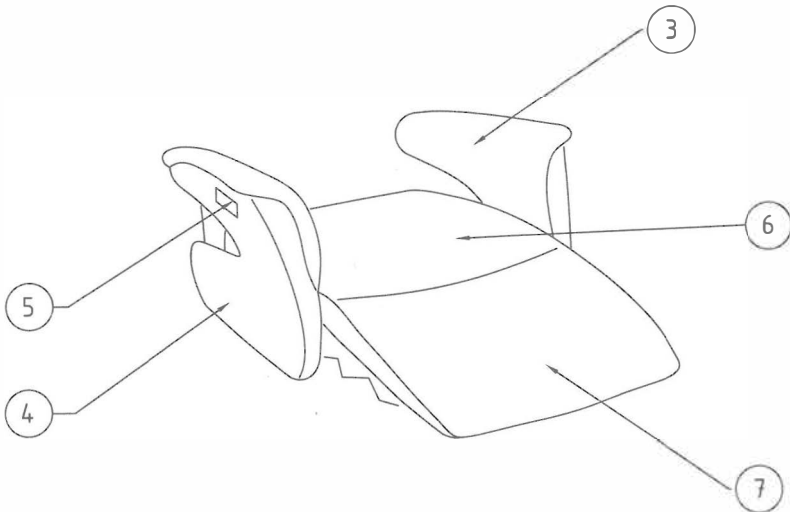

5


4

 8

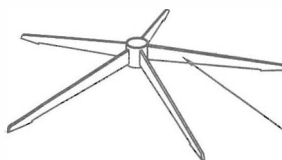


9

 
1.1

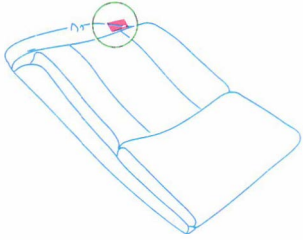

 
1.2

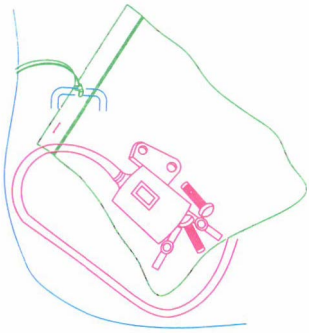

 
1.3

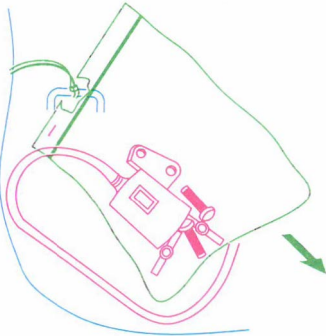

 
1.4

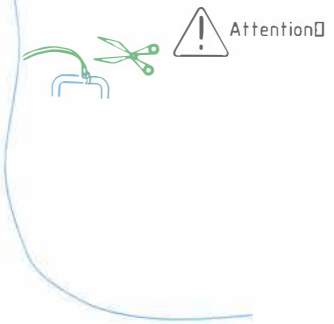

 
1.5

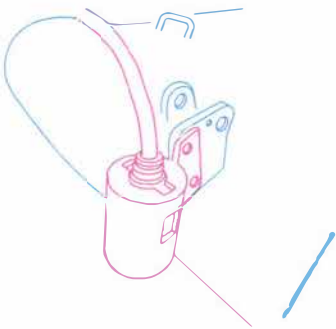

 
1.6

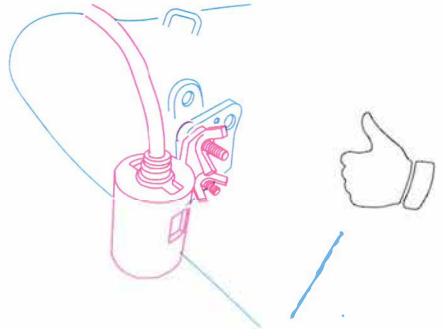

 
2.3

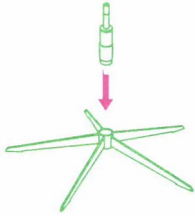

 
2.4

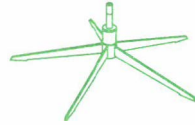



 
3.1

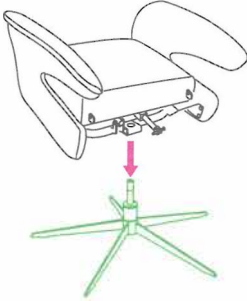

 
3.2

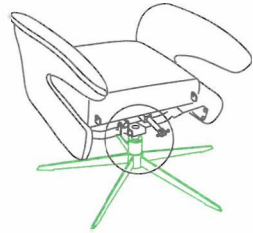

   
3.3

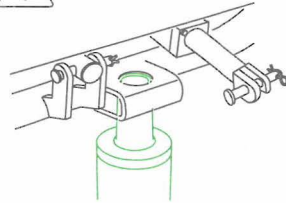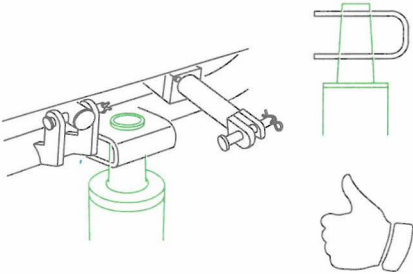

 
4.1

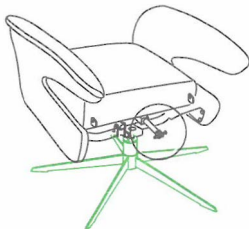

 
4.2

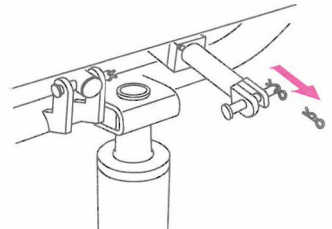

 
3.3

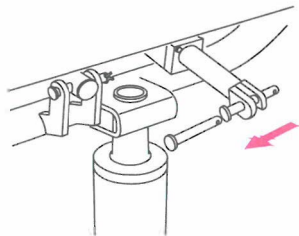

 
3.4

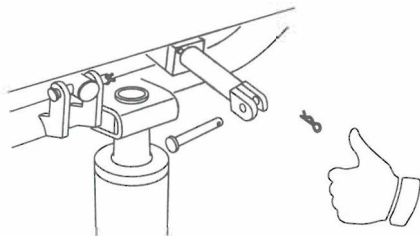

 
4.1

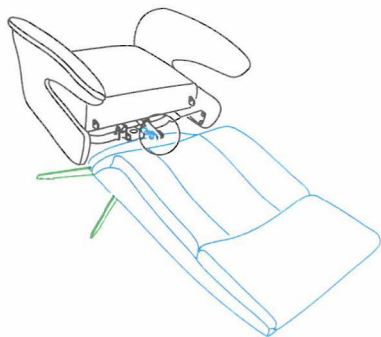

 
4.2

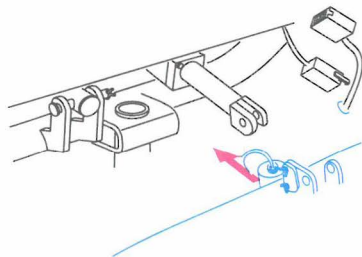


 
4.3

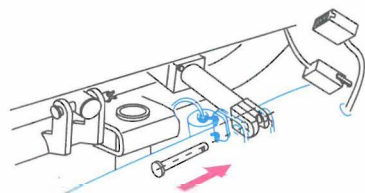

 
4.4

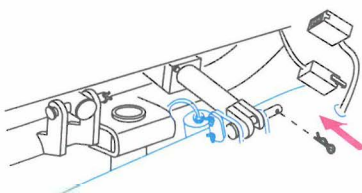

  4.5

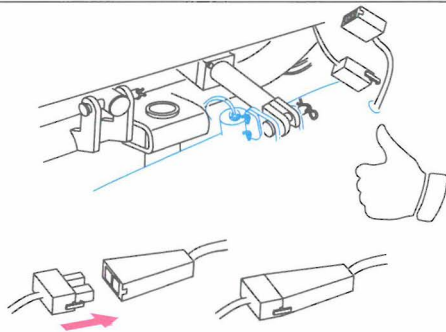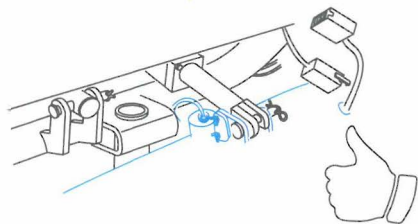


 6.1

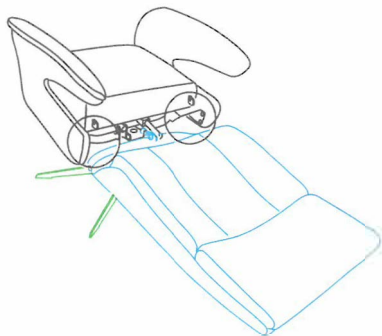


6.2

 check if the plastic click is blocked

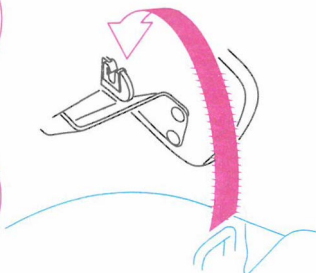


 6.3

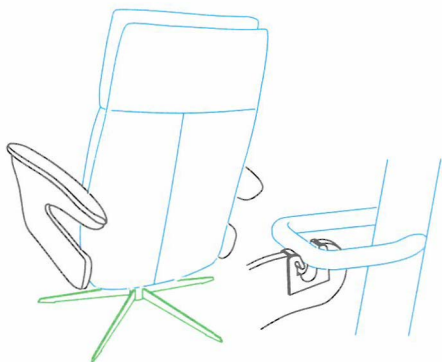



6.4








 
Silent click

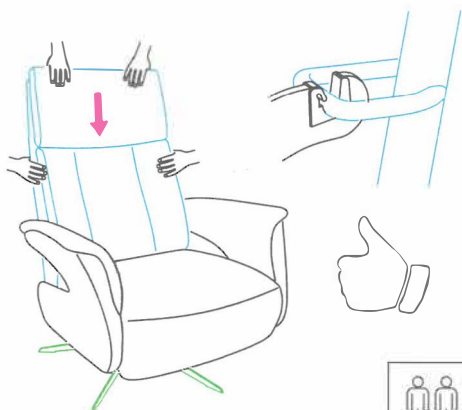



6.5

          check back is fixed

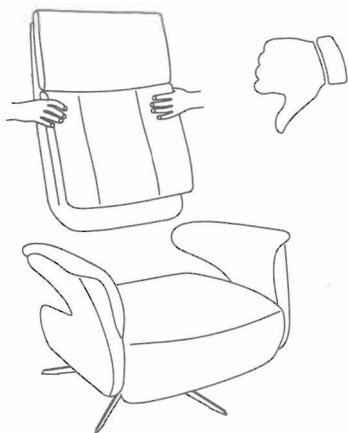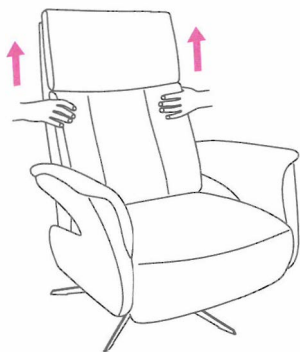


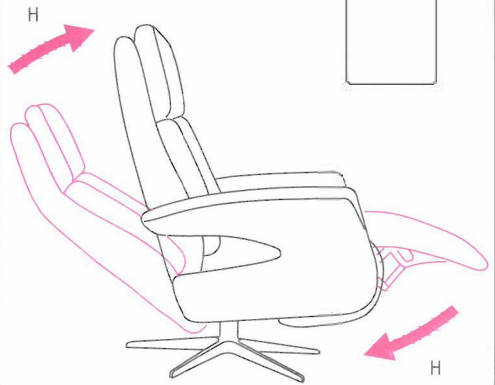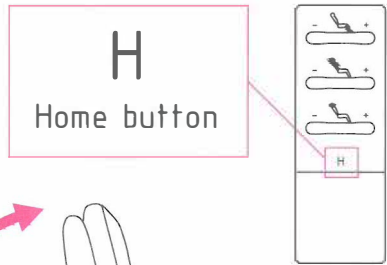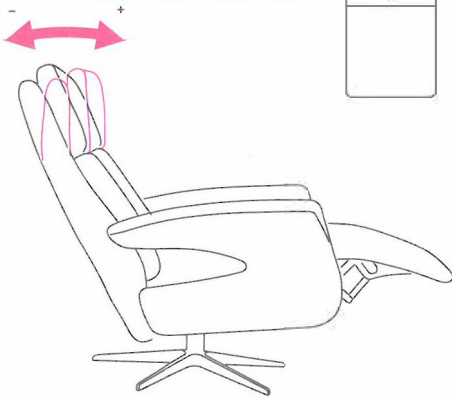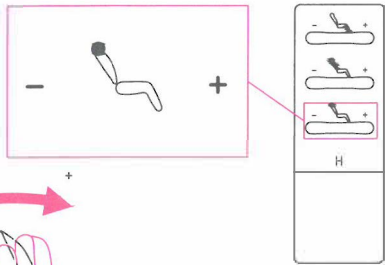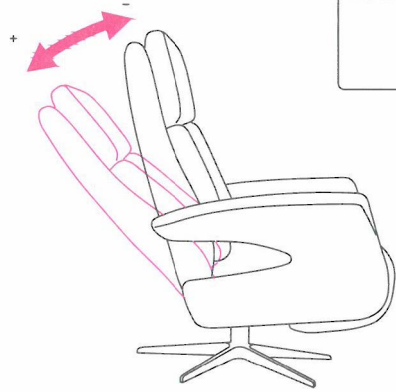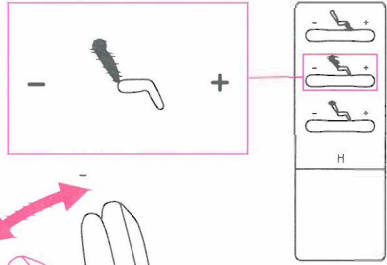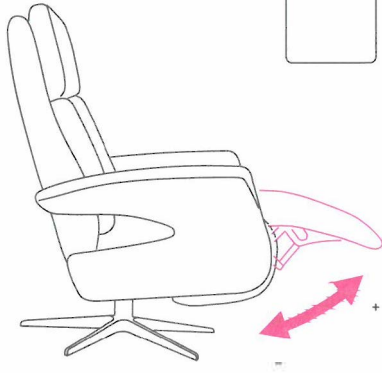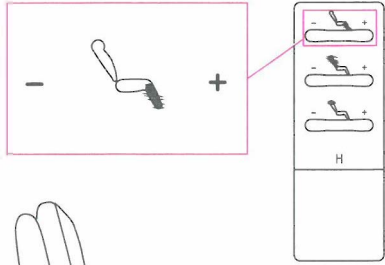





To move the chair, hold the armrests.

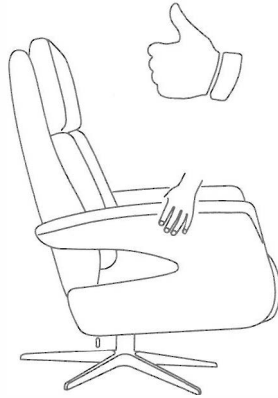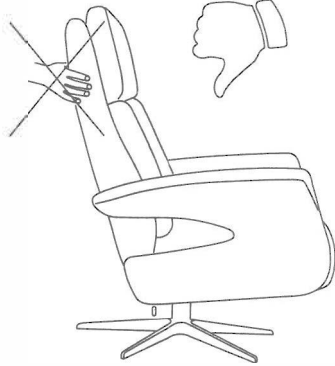  


Exchange click plastic


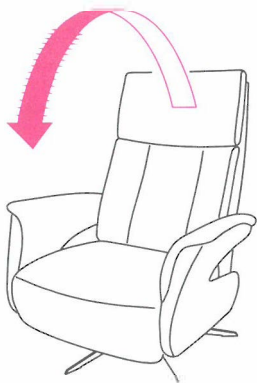 


bag with new click plastic

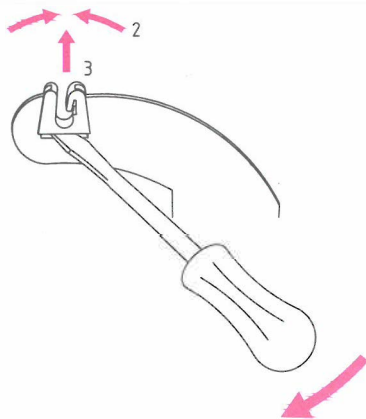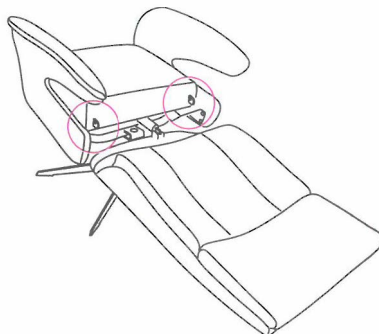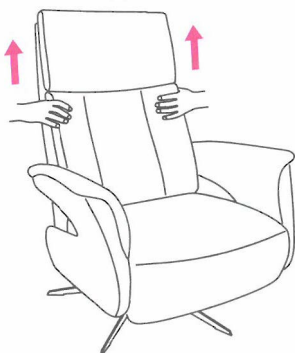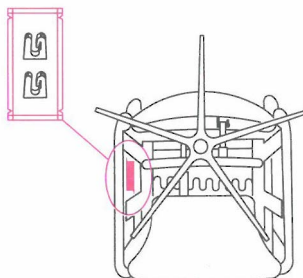    

new click plastic

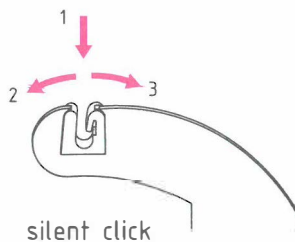 

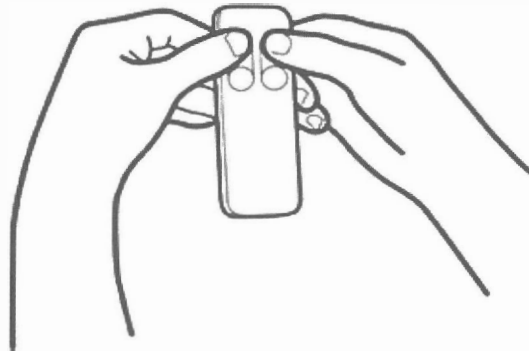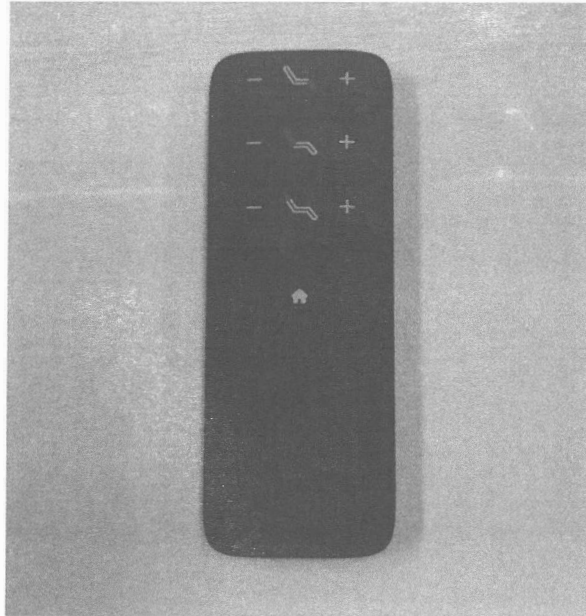  

DE - Koppeln der Linak-Fernbedienung

1. Trennen Sie den Stuhl vom Stromnetz und warten Sie 30 Sekunden.
2. Schließen Sie den Stuhl wieder an das Stromnetz an.
3. Warten Sie eine Weile, bis der Akku piept.
4. Halten Sie die beiden oberen Tasten auf der Fernbedienung gedrückt, bis der Signalton erneut ertönt.

FR - Couplage de la télécommande Linak

1. débranchez la chaise du réseau électrique et attendez 30 secondes.
2. rebranchez la chaise sur le secteur.
3. attendez un moment jusqu'à ce que la batterie émette un bip.
4. maintenez les deux boutons supérieurs de la télécommande enfoncés jusqu'à ce que le signal sonore retentisse à nouveau.

IT - Accoppiamento del telecomando Linak

1. Scollegare la poltrona dalla rete elettrica e attendere 30 secondi.
2. ricollegare la poltrona alla rete elettrica.
3. attendere un po' fino a quando la batteria emette un segnale acustico.
4. tenere premuti i due pulsanti superiori del telecomando finché non viene emesso un nuovo segnale acustico.

GB - Pairing the Linak remote

1. Disconnect the chair from the mains and wait 30 seconds.
2. Reconnect power to the chair.
3. Wait for a while for the battery to beep.
4. Press and hold the top two buttons on the remote control until the beep sounds again