
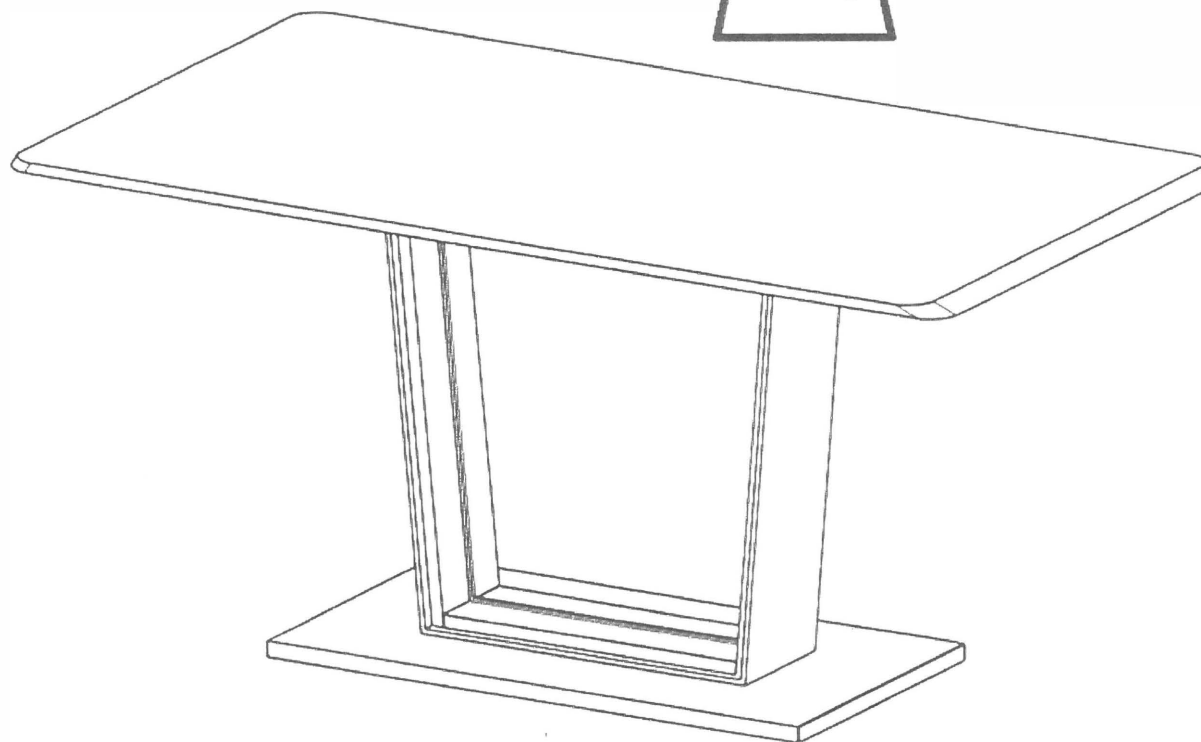


15 min



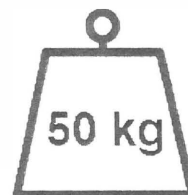






Created: 14.10.2020

Modified: -

(D) Montageanleitung
(NL) Handleiding voor de montage
(TR) Montaj talimatı
(FR) Instructions de montage
(CZ) Montážní návod
(HU) Összeszerelési útmutató



(GB) Assembly instructions
(PL) Instrukcja montażu
(RU) Инструкция по монтажу
(IT) Istruzioni di montaggio
(RO) Instrucțiuni de asamblare
(SK) Montážny návod

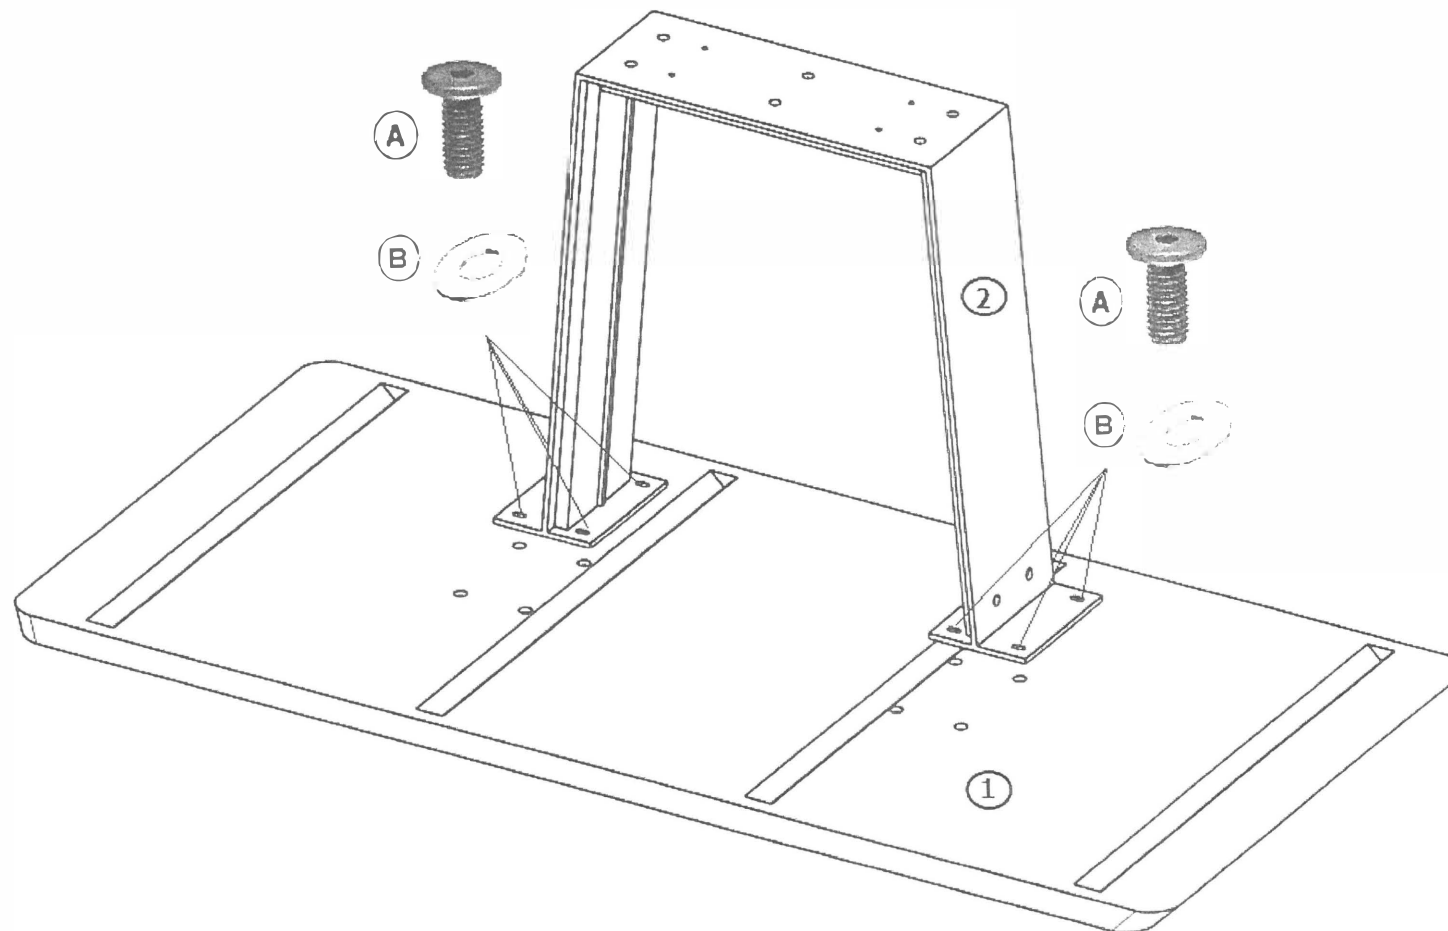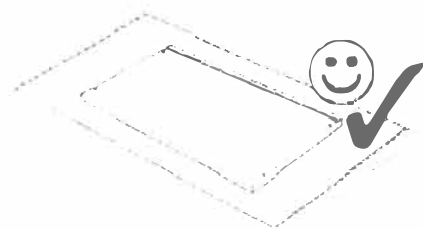

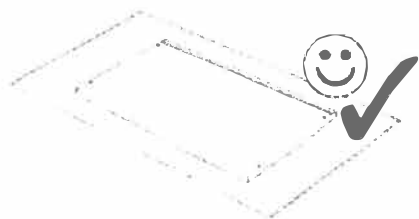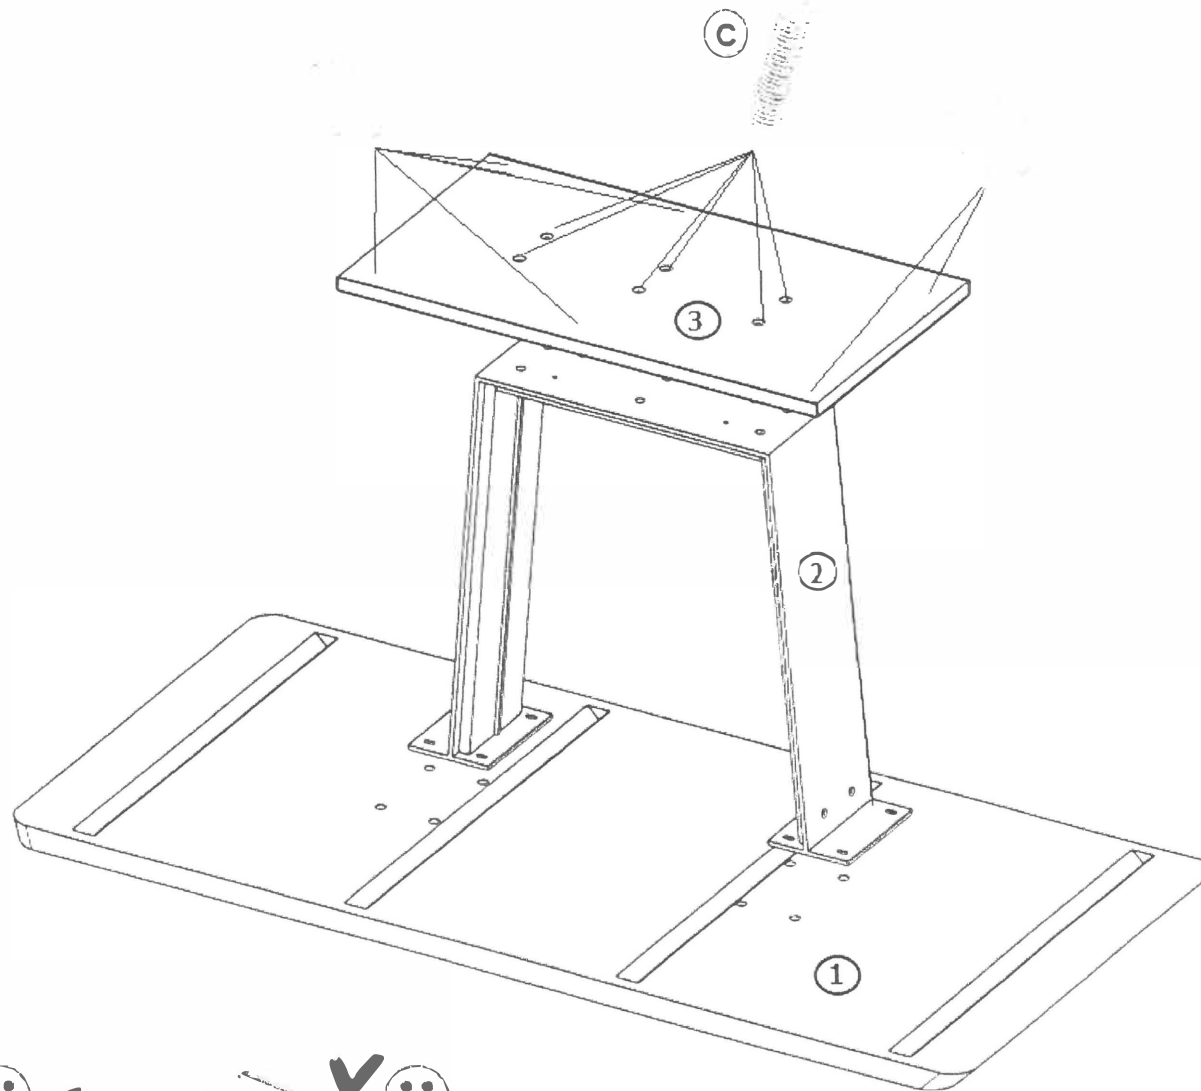

Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam • Nazwa • Jméno • Názov • Név • Denimiro • Ism • Название	Valnatura Mambo
Nr • No • N° • Номер • C • Sz	M218VSBE
Typ • Type • Tip • Típus • Tipo • Тип	VSBE
	

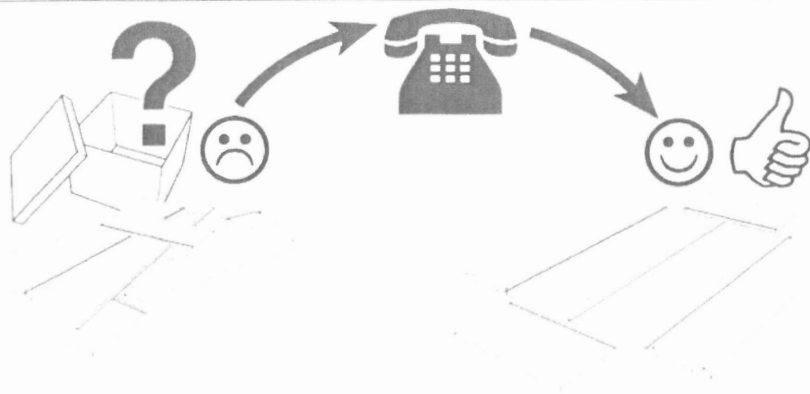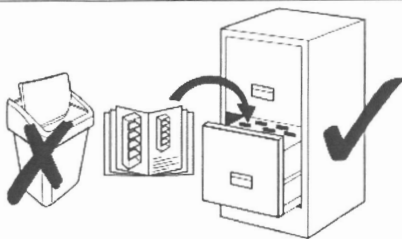

1. 1800x900x25mm


2. 825x210x720mm

3. 900x500x25mm

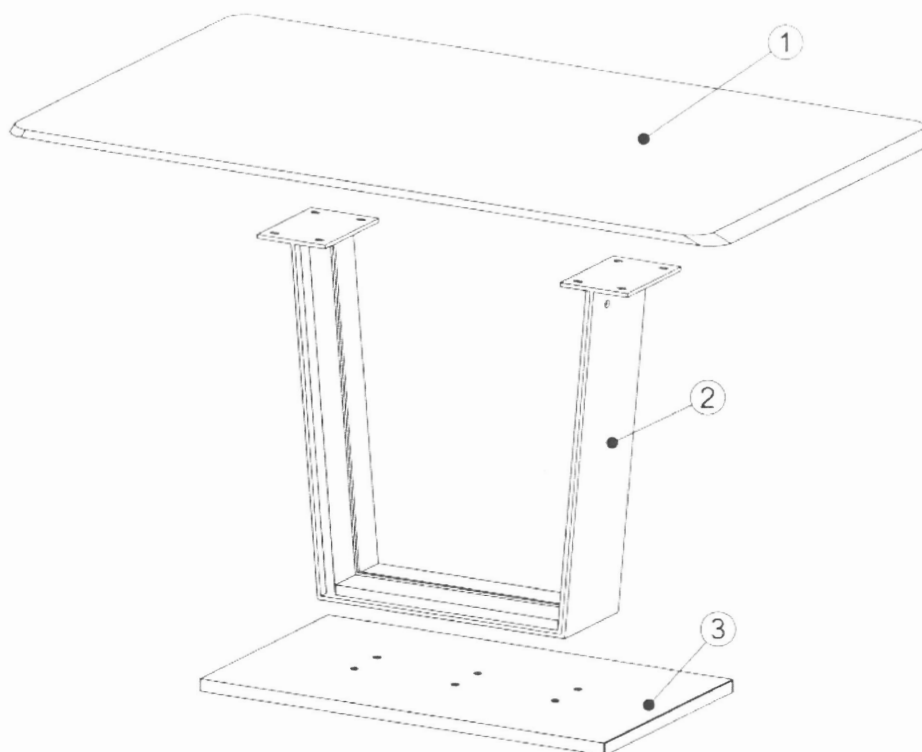

Created: 16.10.2020

Modified: -

 M6x20 A	D6 B	M8x45 C	 x1 s=4 mm	 x1 s=5 mm
x8	x8	x6		