



Fig. 1

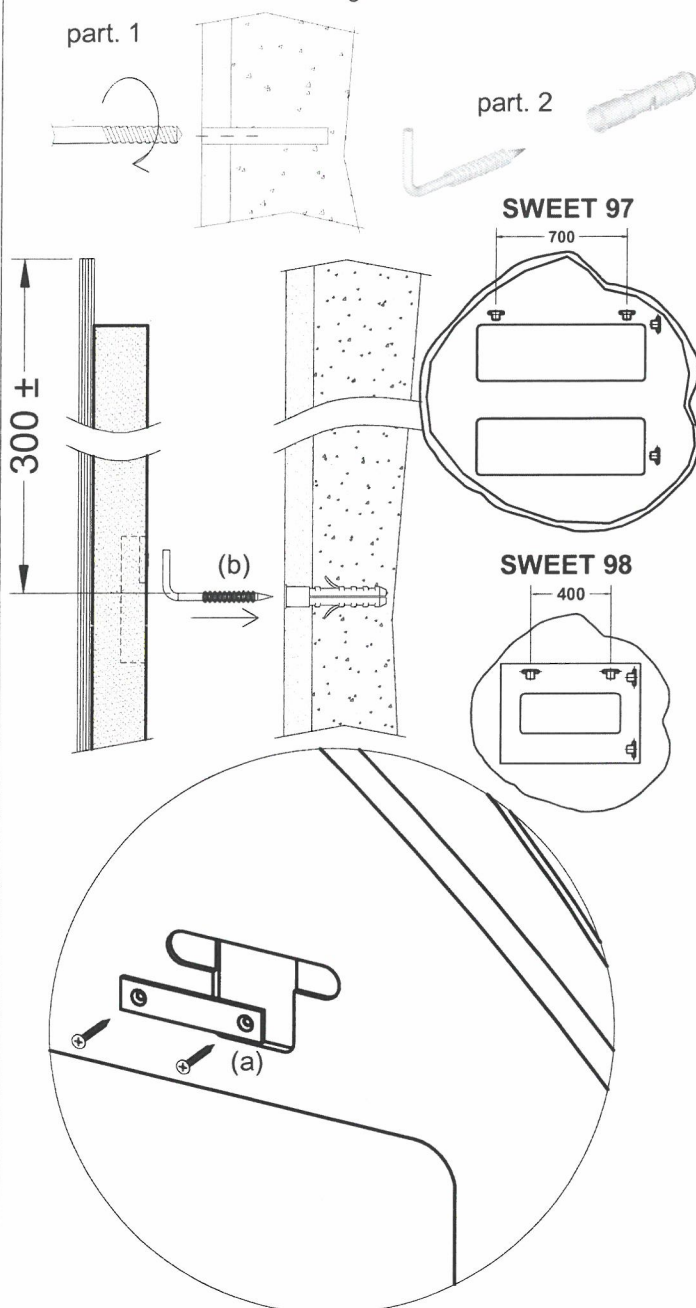

1. Forare il muro c/punta elicoidale Ø6 (part. 1) per l' inserimento dei fischer.
SWEET 97: i fori in altezza vanno posizionati a ca. 300 mm più in basso rispetto all' altezza del bordo superiore dello specchio e ad interasse di 700 mm (fig. 1).
SWEET 98: i fori in altezza vanno posizionati a ca. 300 mm più in basso rispetto all' altezza del bordo superiore dello specchio e ad interasse di 400 mm (fig. 1).
2. Avvitare il gancio a "L" 45x20 allegato (part. 2).
3. Avvitare le piastrine (a), in posizione orizzontale o verticale, sul retro del pannello con viti TPS 3,5x15 allegate.

1. Hole with drill Ø6 (part 1) and insert the fischer.
SWEET 97: Pay attention that the holes are at approx. 300 mm lower than height of the upper edge of the mirror (wheelbase 700 mm – see fig. 1).
SWEET 98: Pay attention that the holes are at approx. 300 mm lower than height of the upper edge of the mirror (wheelbase 400 mm – see fig. 1).
2. Screw the "L" 45x20 hook attached (part. 2).
3. Screw the hardware (a) in horizontal or vertical position with TPS 3,5x15 screws.

Fig. 2

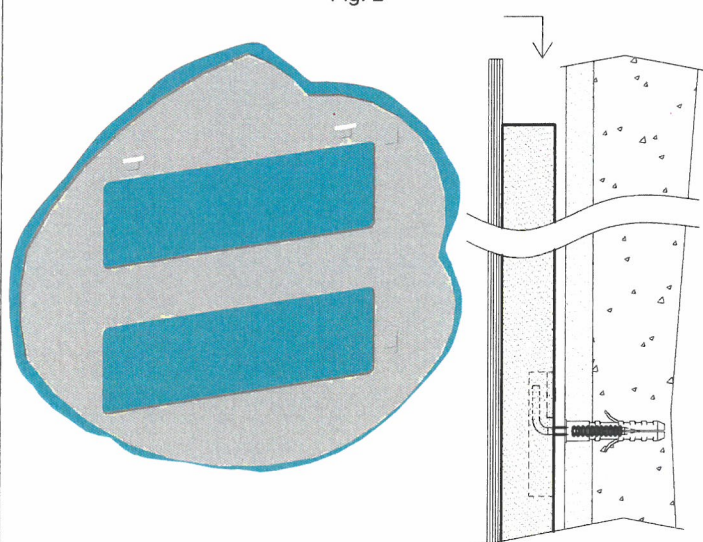

4. Agganciare lo specchio ai ganci (b) precedentemente fissati a parete (fig. 2).
4. Hang the mirror at the screw hooks (b) previously fixed to the wall (fig. 2).