

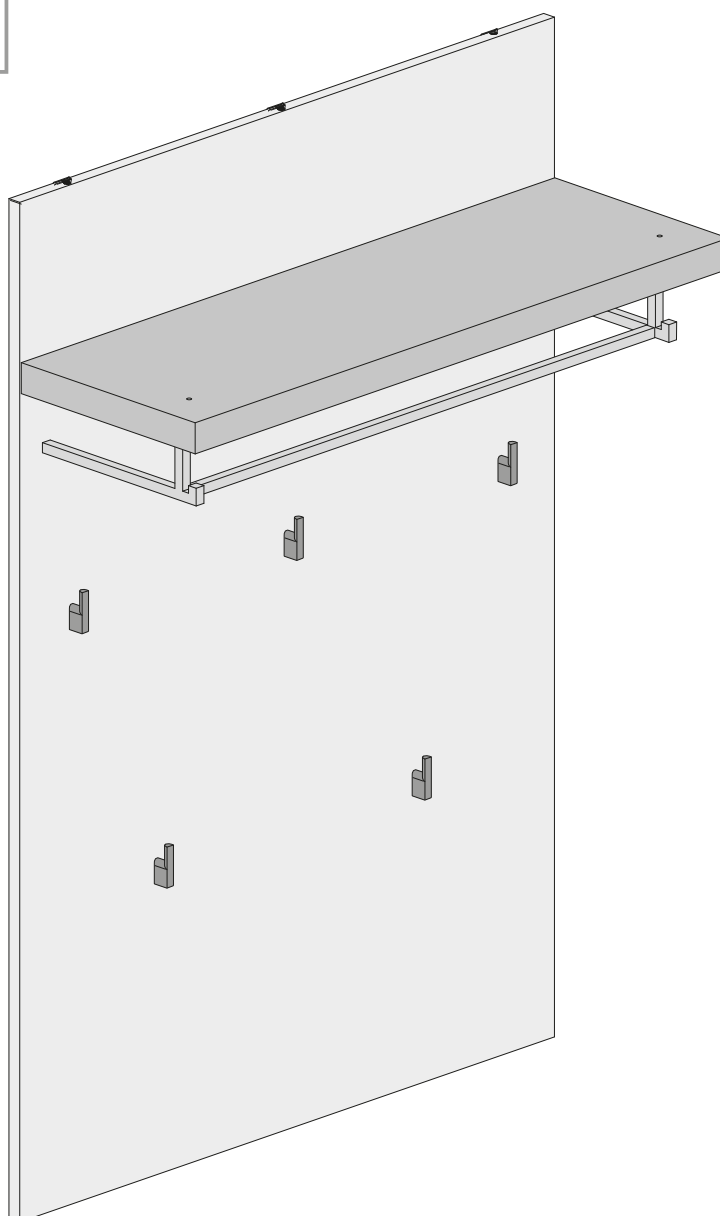
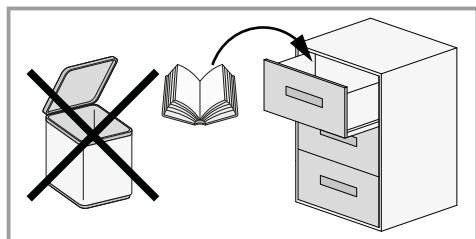
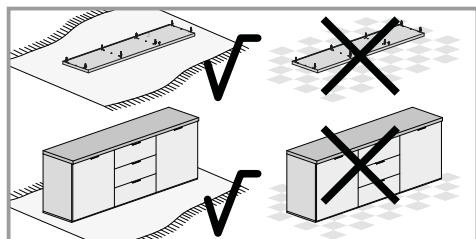







Garderobenpanel



IDEA












 F5 Ø3,5x16mm n.6	 F8 Ø7x50mm n.3	 F9 Ø4x16mm n.2	 F10 Ø4x25mm n.12	 F11 Ø4x45mm n.2	 F12 Ø5x25mm n.5
 F14 Ø15-Ø5 n.2	 L5 n.5	 N4 n.3	 N5 n.1+1	 N6 n.1	 N7 n.2
 M2 Ø8 n.2	 M3 Ø8 n.2				

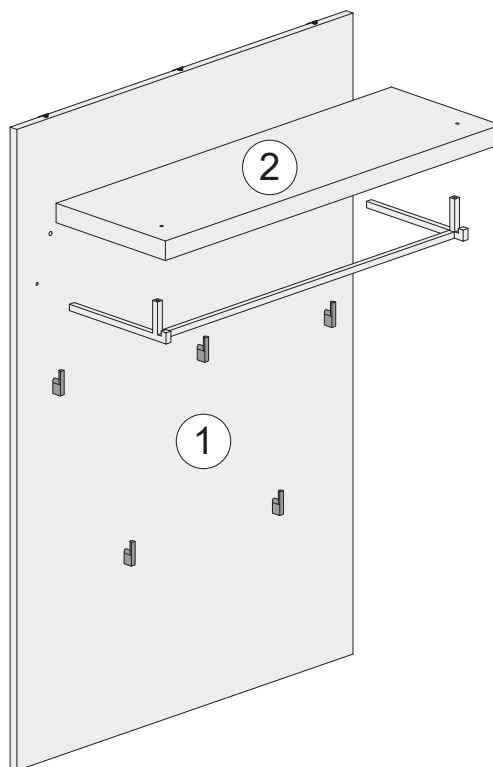





Nr. 1x1 (XP_COIDEPY1-BIA)
Nr. 2x1 (XP_COIDEPM1-R27)

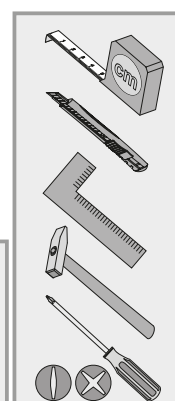

1

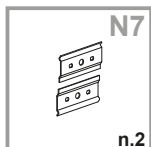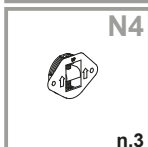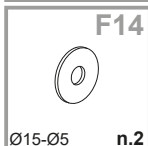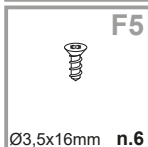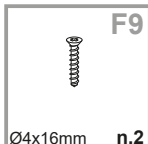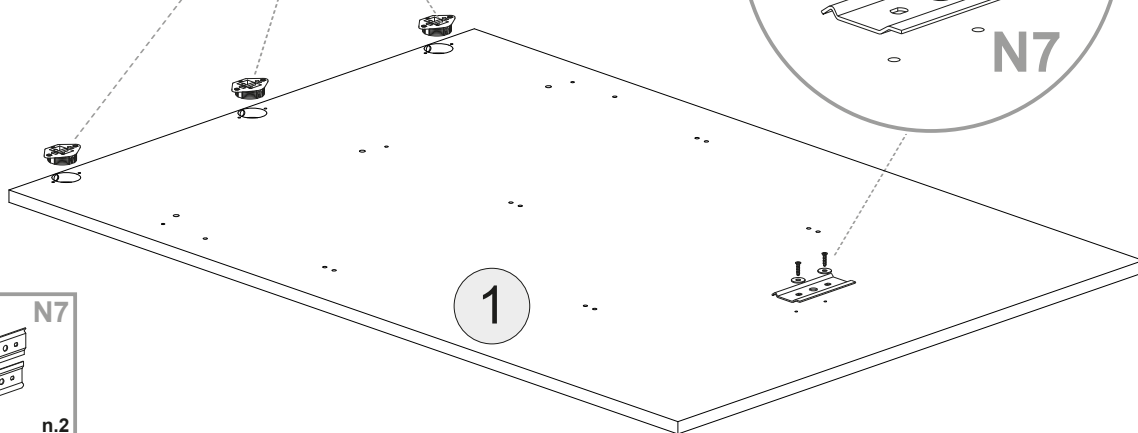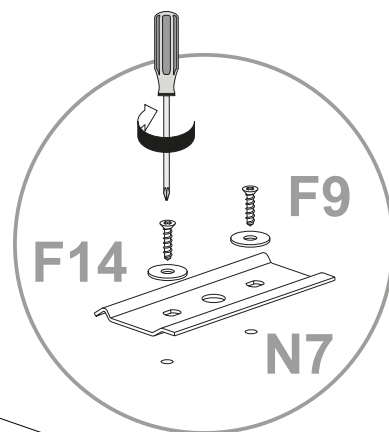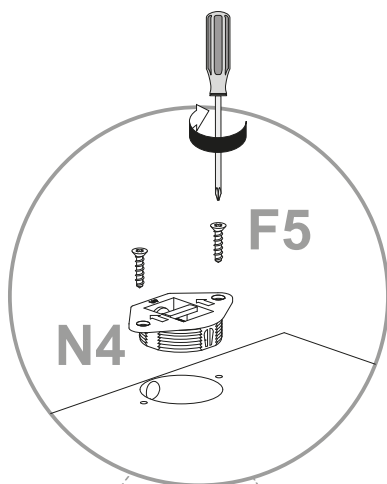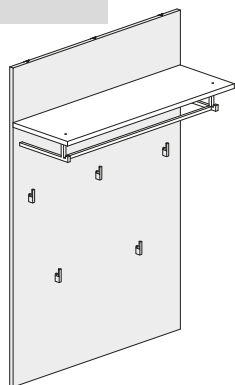

2

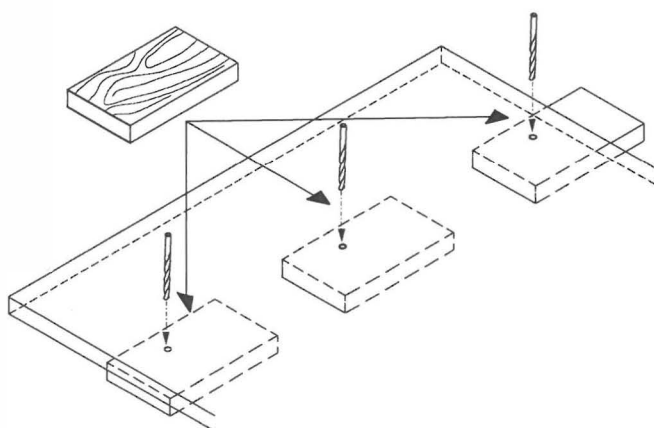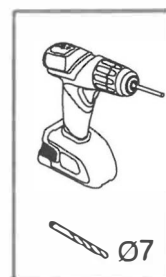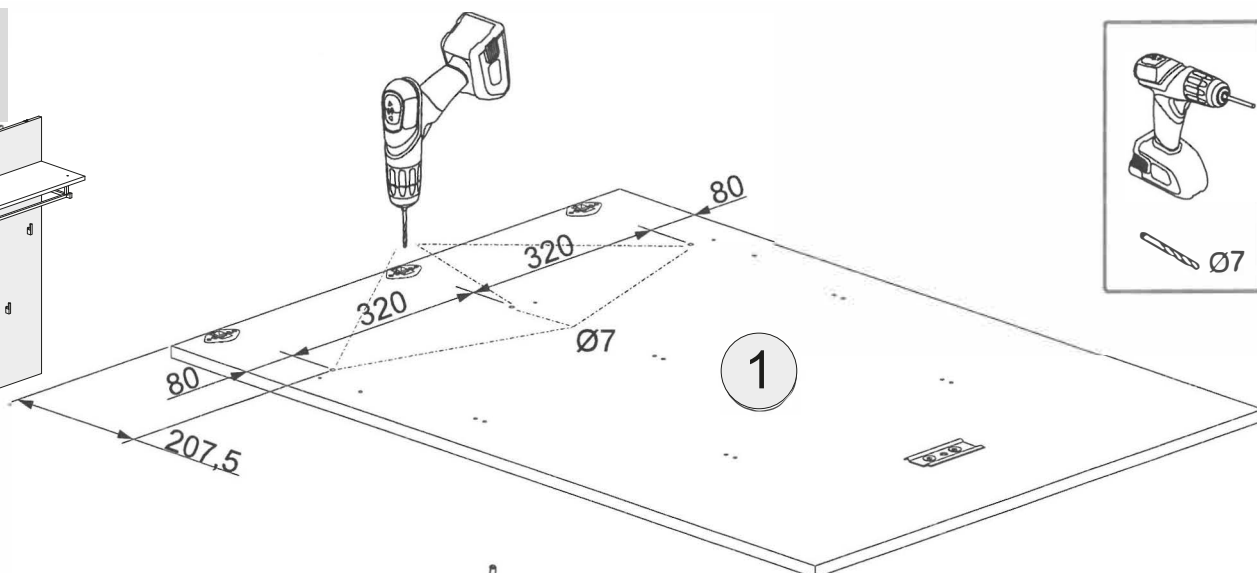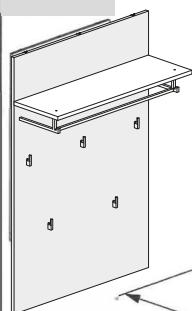

(D) Um Splitterungen zu vermeiden, benutzen Sie Bitte Ein Stueck Hols bei der Durchbohrung der Löcher!




(E) To avoid splintering, please use a piece of wood When drilling the holes!

(F) Afin d'éviter les éclats, veuillez utiliser un morceau de bois puor percer le trous!




(I) Per evitare schegge, utilizzare un pezzo di legno durante la perforazione dei fori!

(NL) Gebruik bij het boren van de gaten een stuk hout Om versplintering te voorkomen!





3

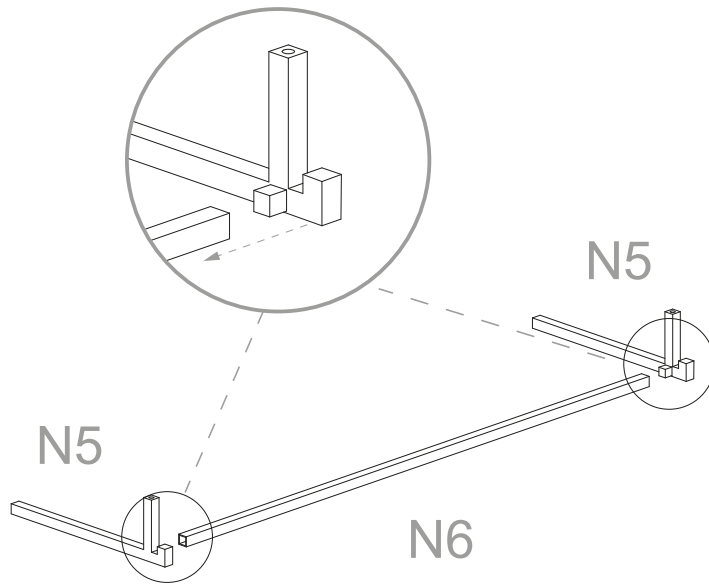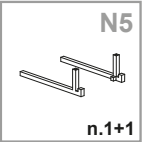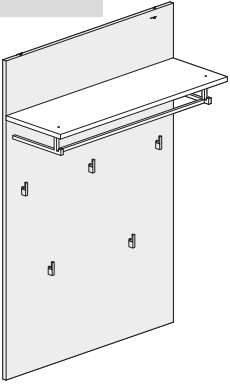

4

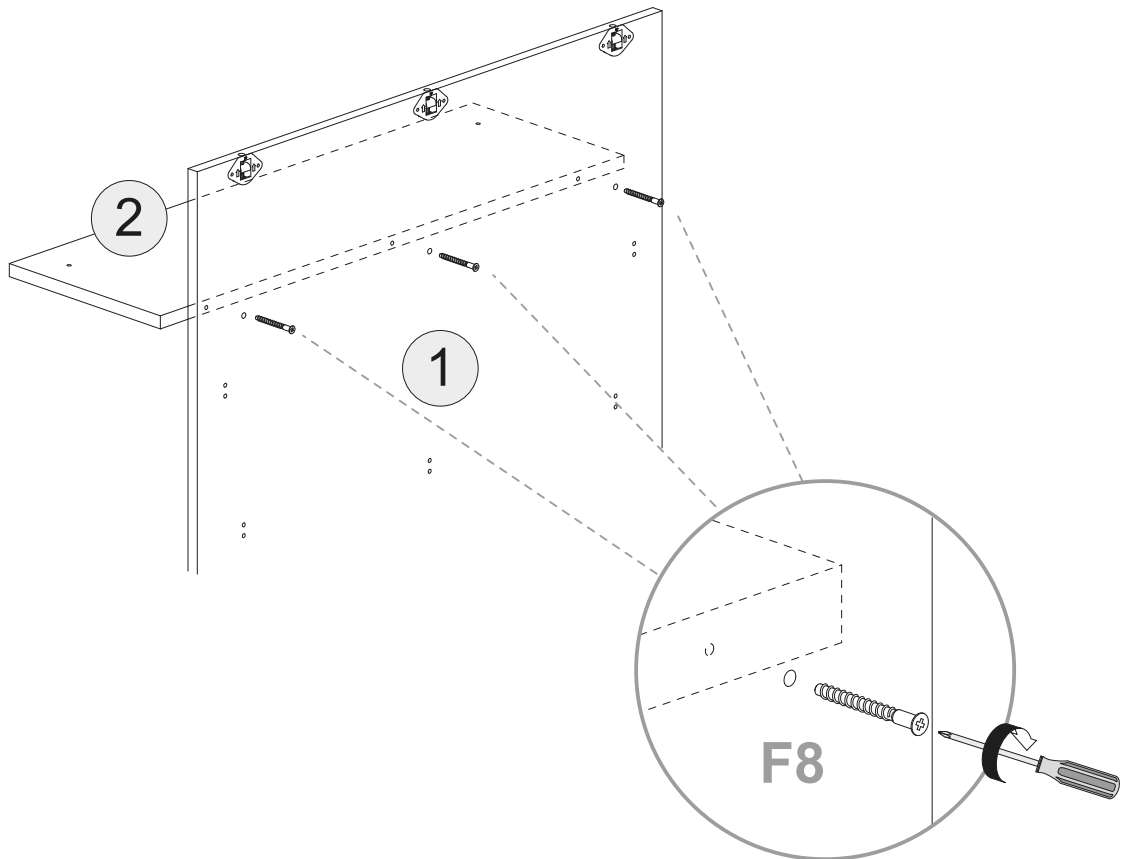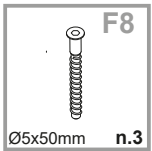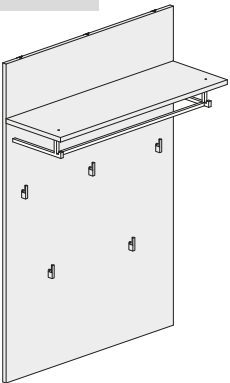

5

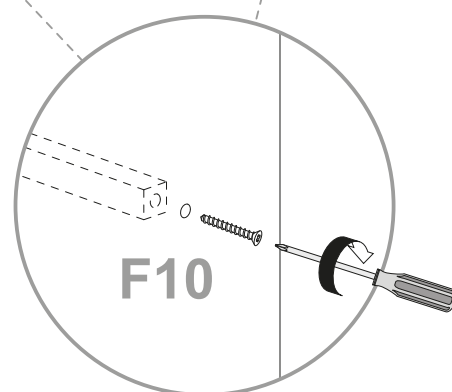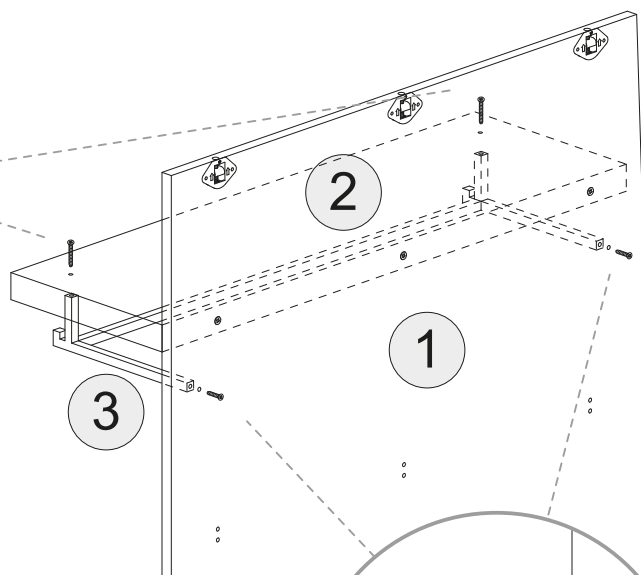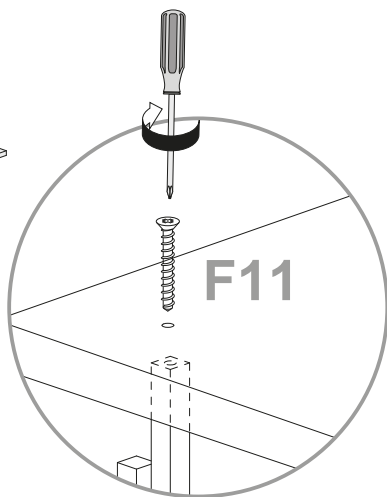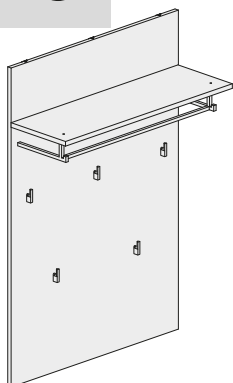

F10






Ø4x25mm n.2

F11



Ø4x45mm n.2

6

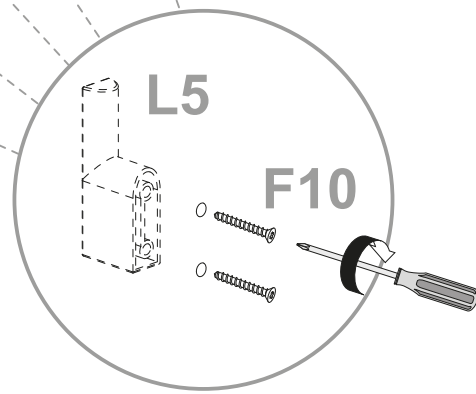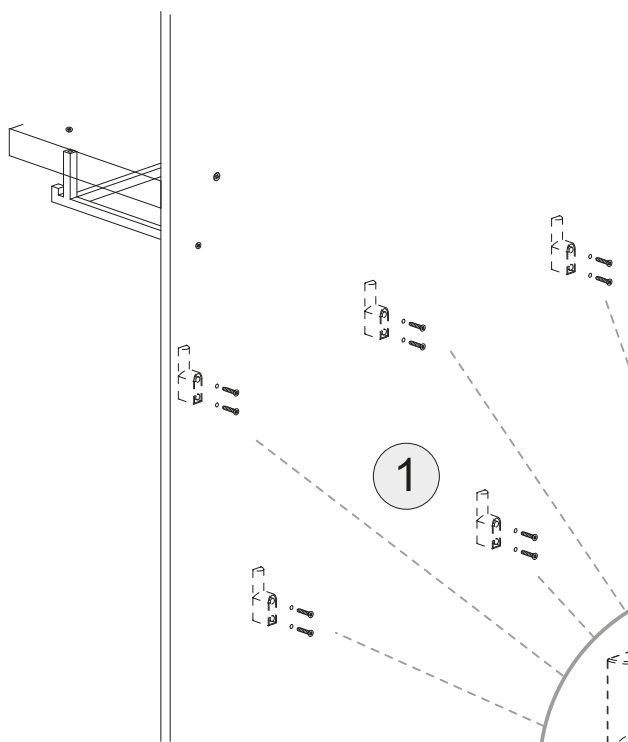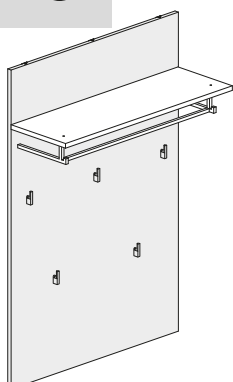

F10








M4x22,5mm n.10

L5





n.5

7

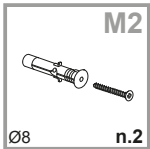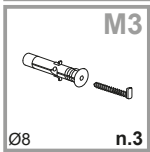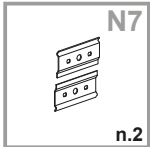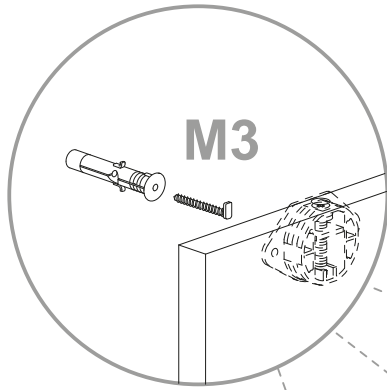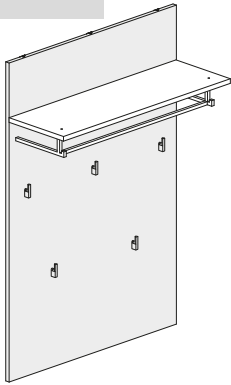

1005 mm

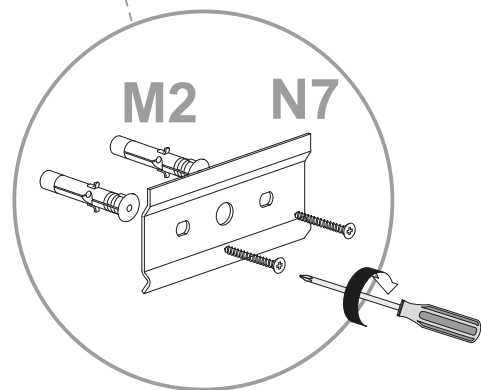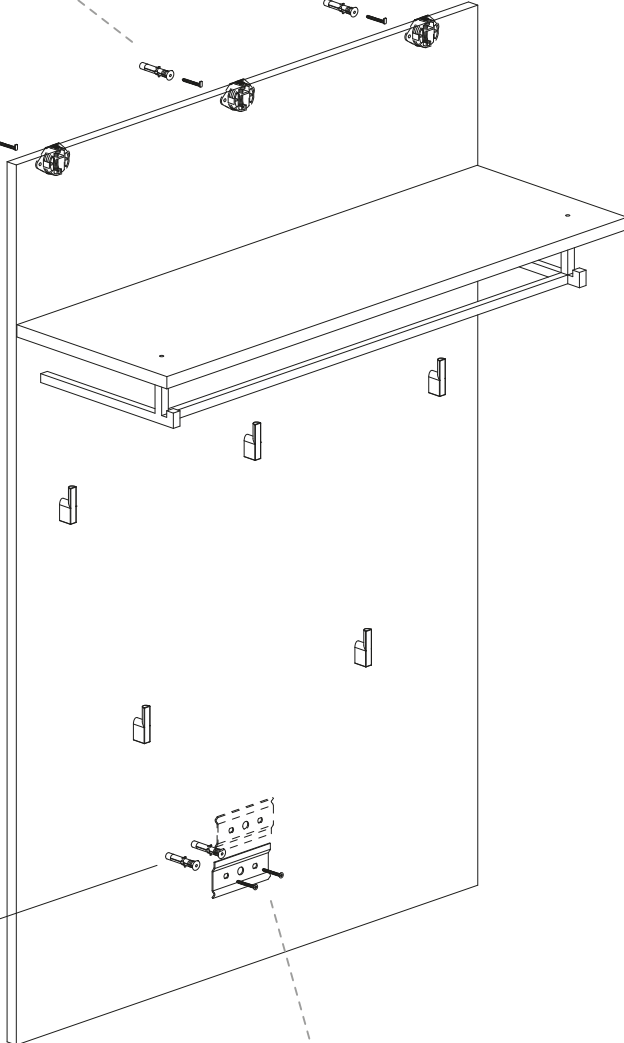

(D) M2-M3 Nicht für Gipskartonplatten geeignet
 (E) M2-M3 Not suitable for plasterboard
 (I) M2-M3 Non adatta per cartongesso
 (F) M2-M3 Ne convient pas aux plaques de plâtre
 (NL) M2-M3 Niet geschikt voor gipsplaat

8

