

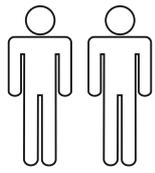




ABW Nr. 119 Schrank 3mm Lochreihe mit Salice Scharnier 4 x Socketsteller

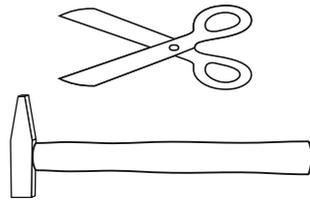

PZ2



8 mm Steinbohrer / Stone drill

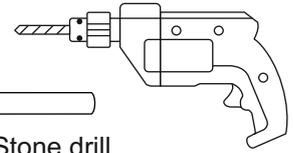

A (4x)	B (4x) 3,5 x 15	C (4x)	D (4x) 4,2 x 10	E (6x) 3,5 x 17	BB 1750008
F (8x)	G (2x)	H (2x) 4 x 25	I (2x)	J (4x) 3,5 x 12	

K BB 1828430

(4x)

L BB 1765287

(8x)

M BB 1829647 - 2202 mm / BB 1829276 - 2362 mm

(1x)

N

(1x)

O

(1x)

P BB 0000000

(1x)

Option

Q

R



S

T


5 x 70

U BB 1773176


4 x 17

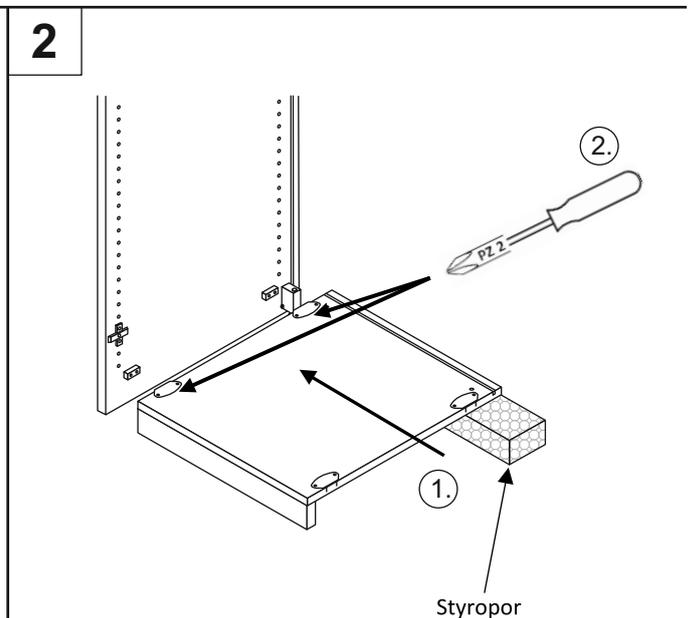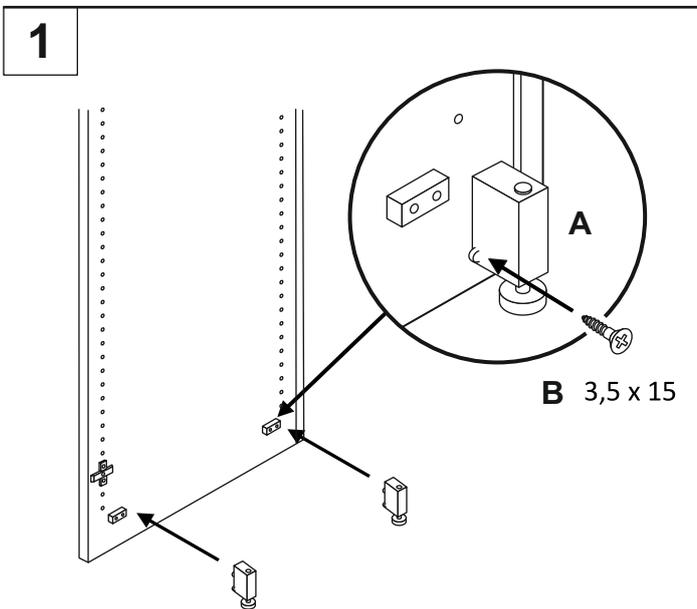


ABW Nr. 119 Schrank 3mm Lochreihe mit Salice Scharnier 4 x Sockelsteller

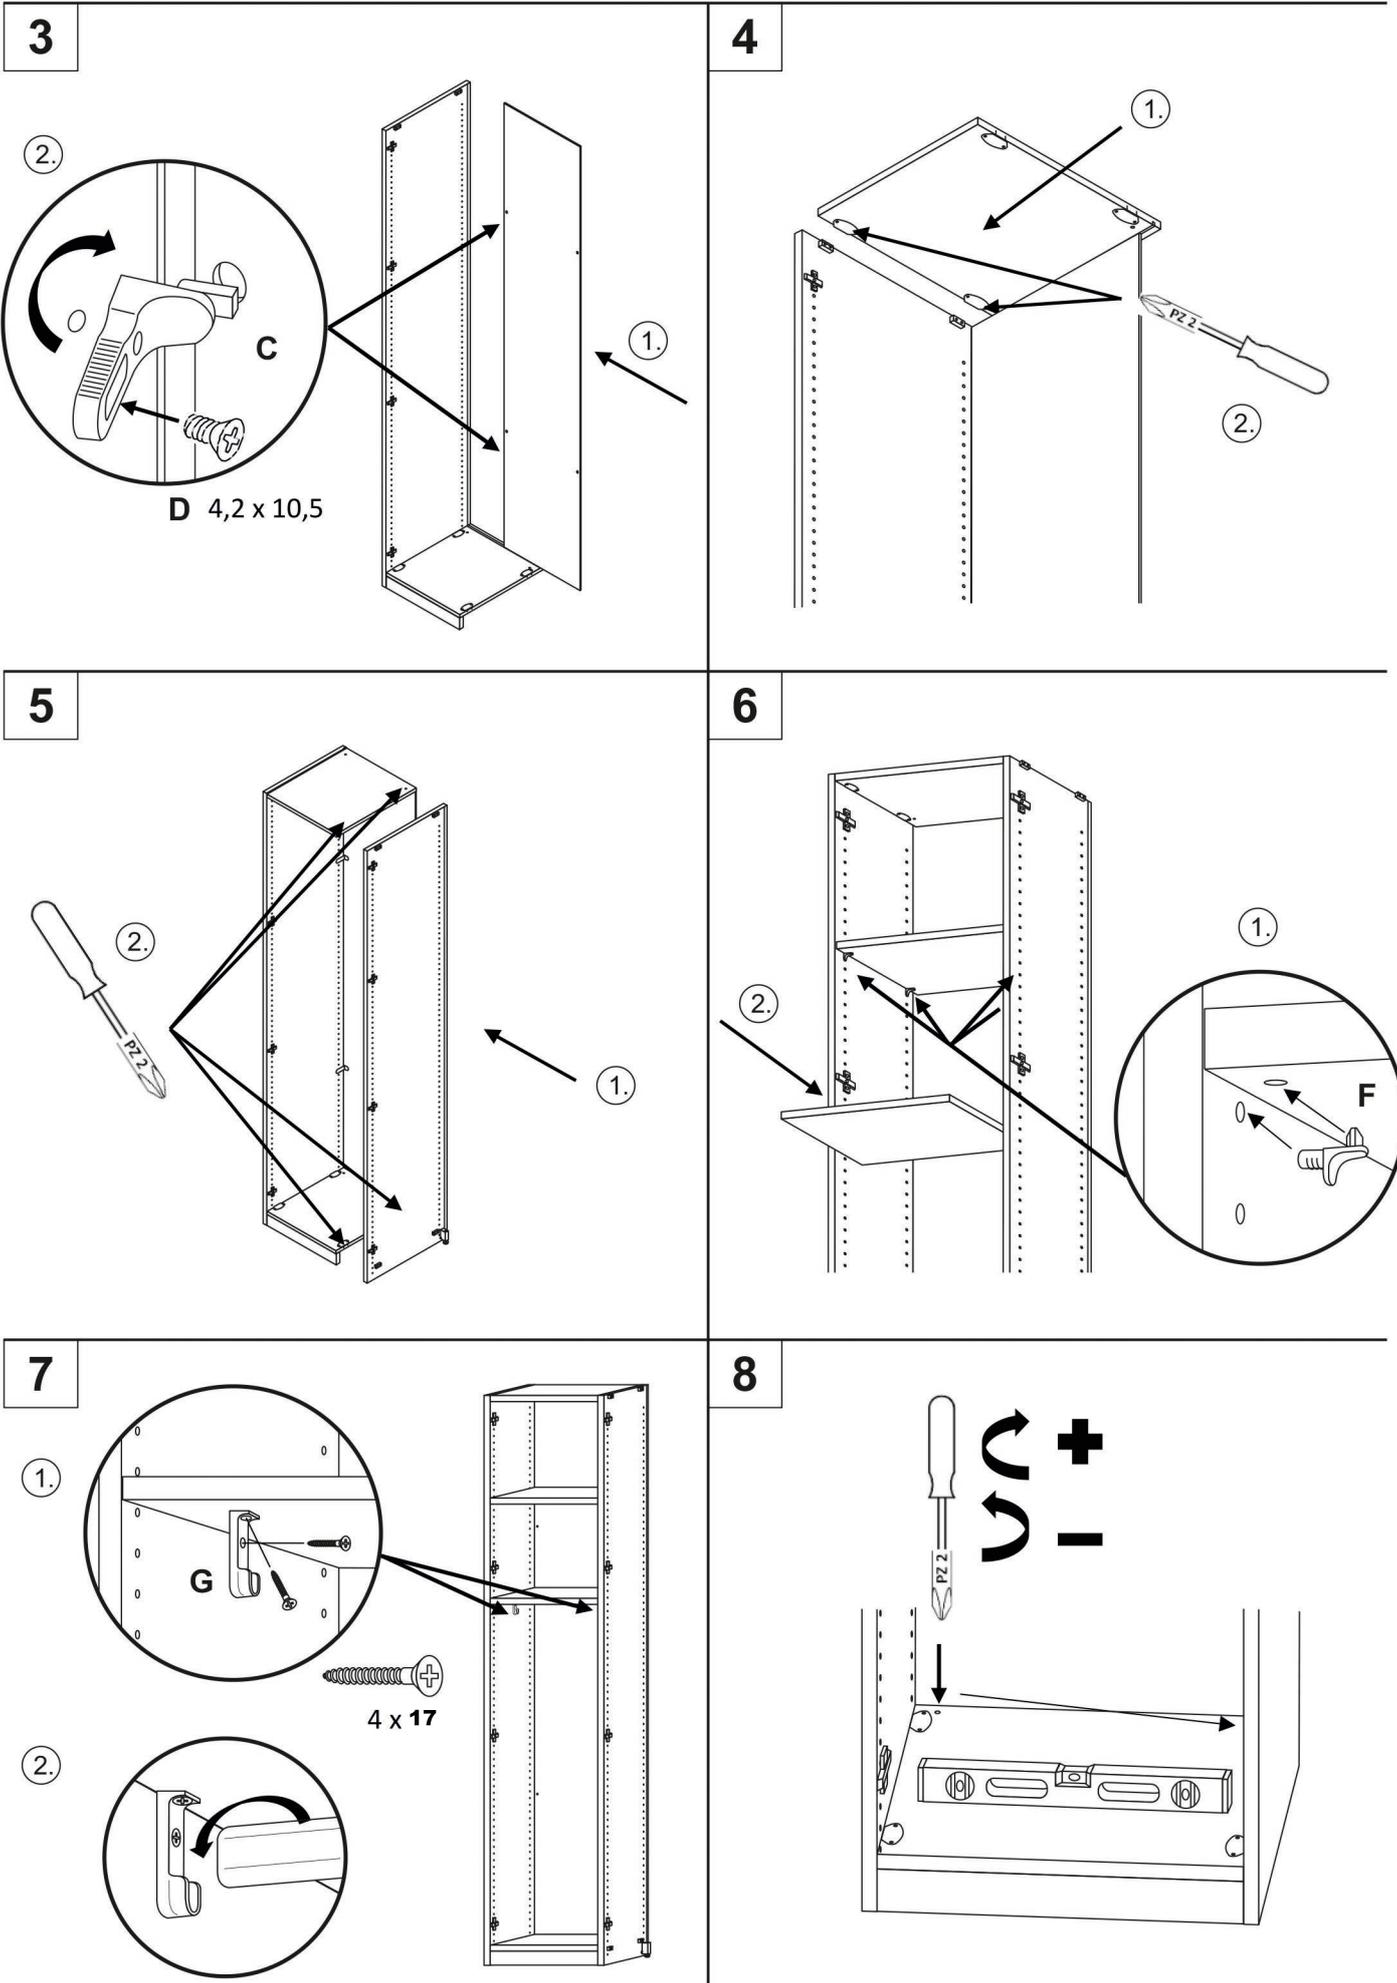

9

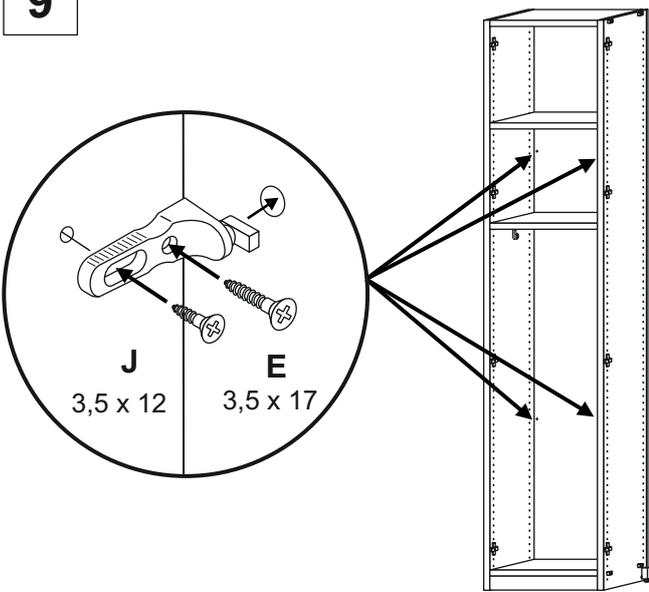


10

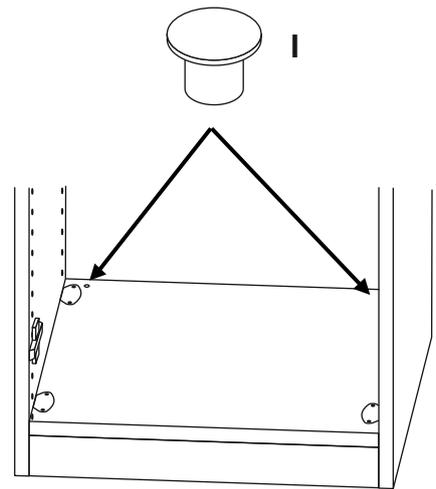


Schritt 1-10 Wiederholen / Repeat step 1-10


11

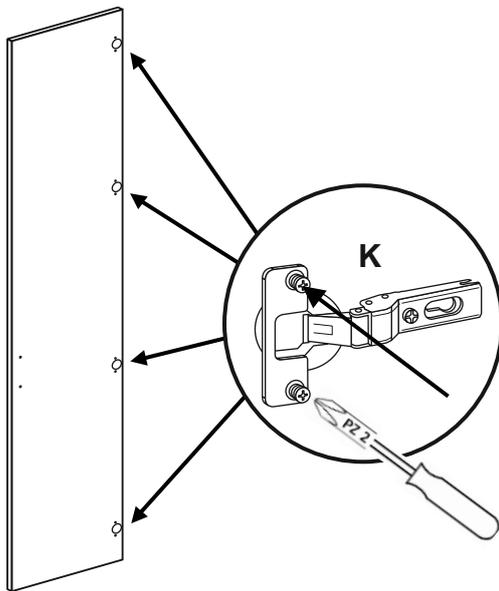


12

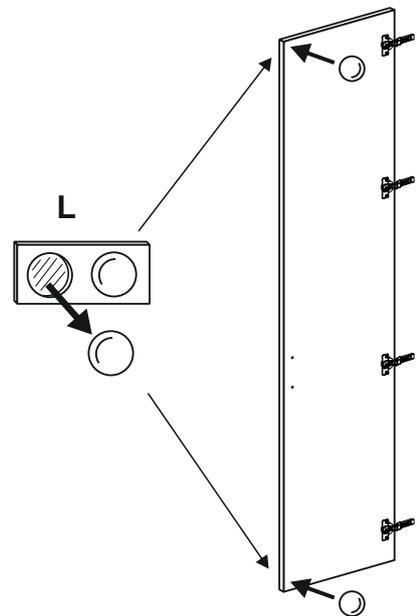

13

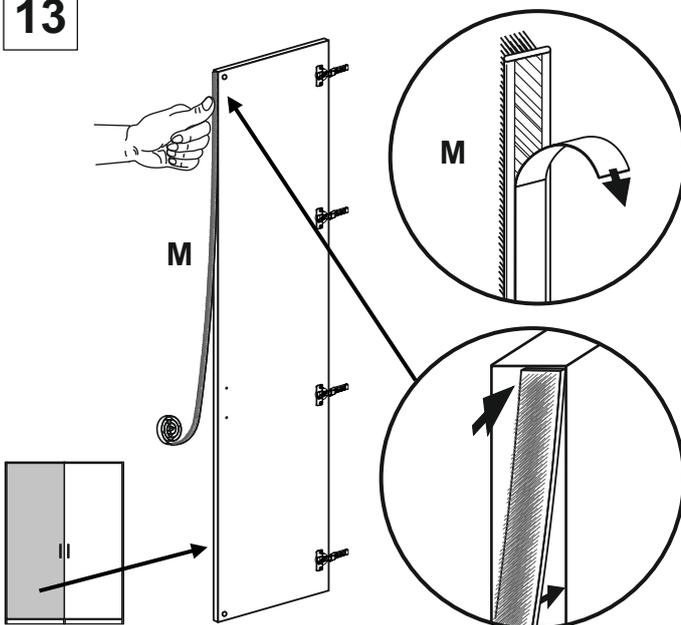

14

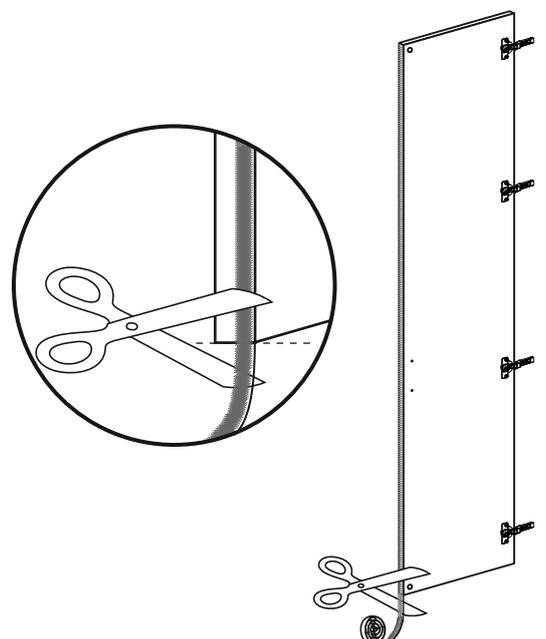

15

Option

16

17

18

Demontage

19 Griffmontage / handle assembly

20 Spiegeltür / mirror door