





Be 016

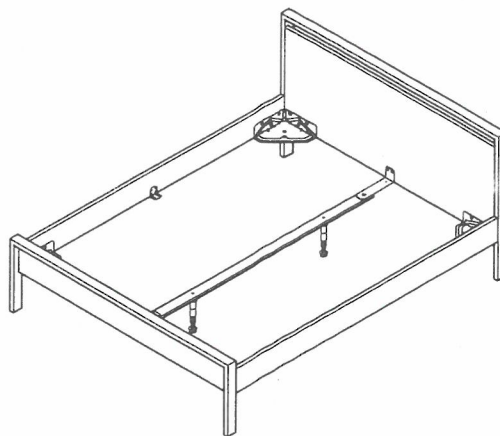


SWISS QUALITY

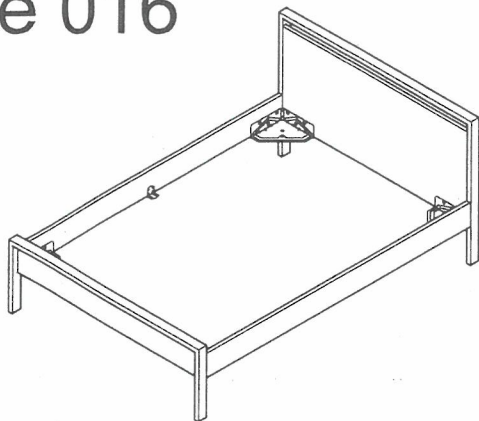


ca. 30 min




KT 1x
(140 cm)

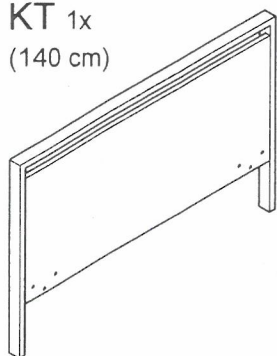


KT 1x
(160 - 200 cm)

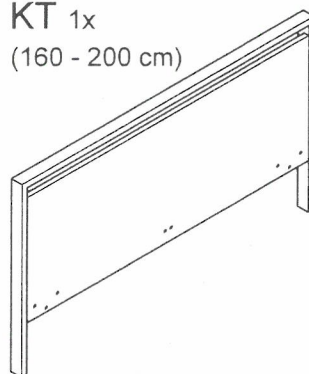


FT 1x
(140 cm)

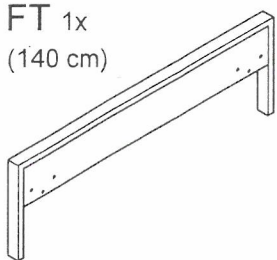

FT 1x
(160 - 200 cm)

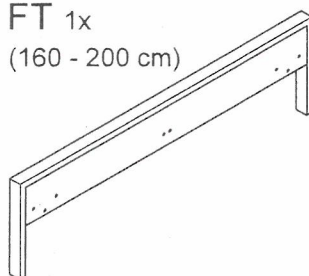


LH 2x

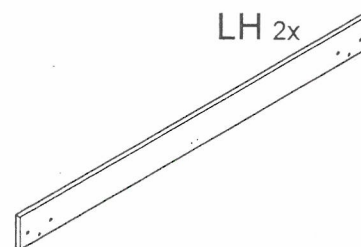


140 cm

A 4x



B 2x



F 24x



M8x20


G 4x



RK 5x20

160 -
200 cm

A 4x



B 2x




C 2x



D 2x



LT 1x

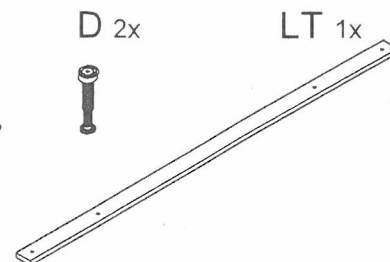

F 30x



M8x20

G 4x



RK 5x20

H 4x





SK 4x20

I 2x




M10x35

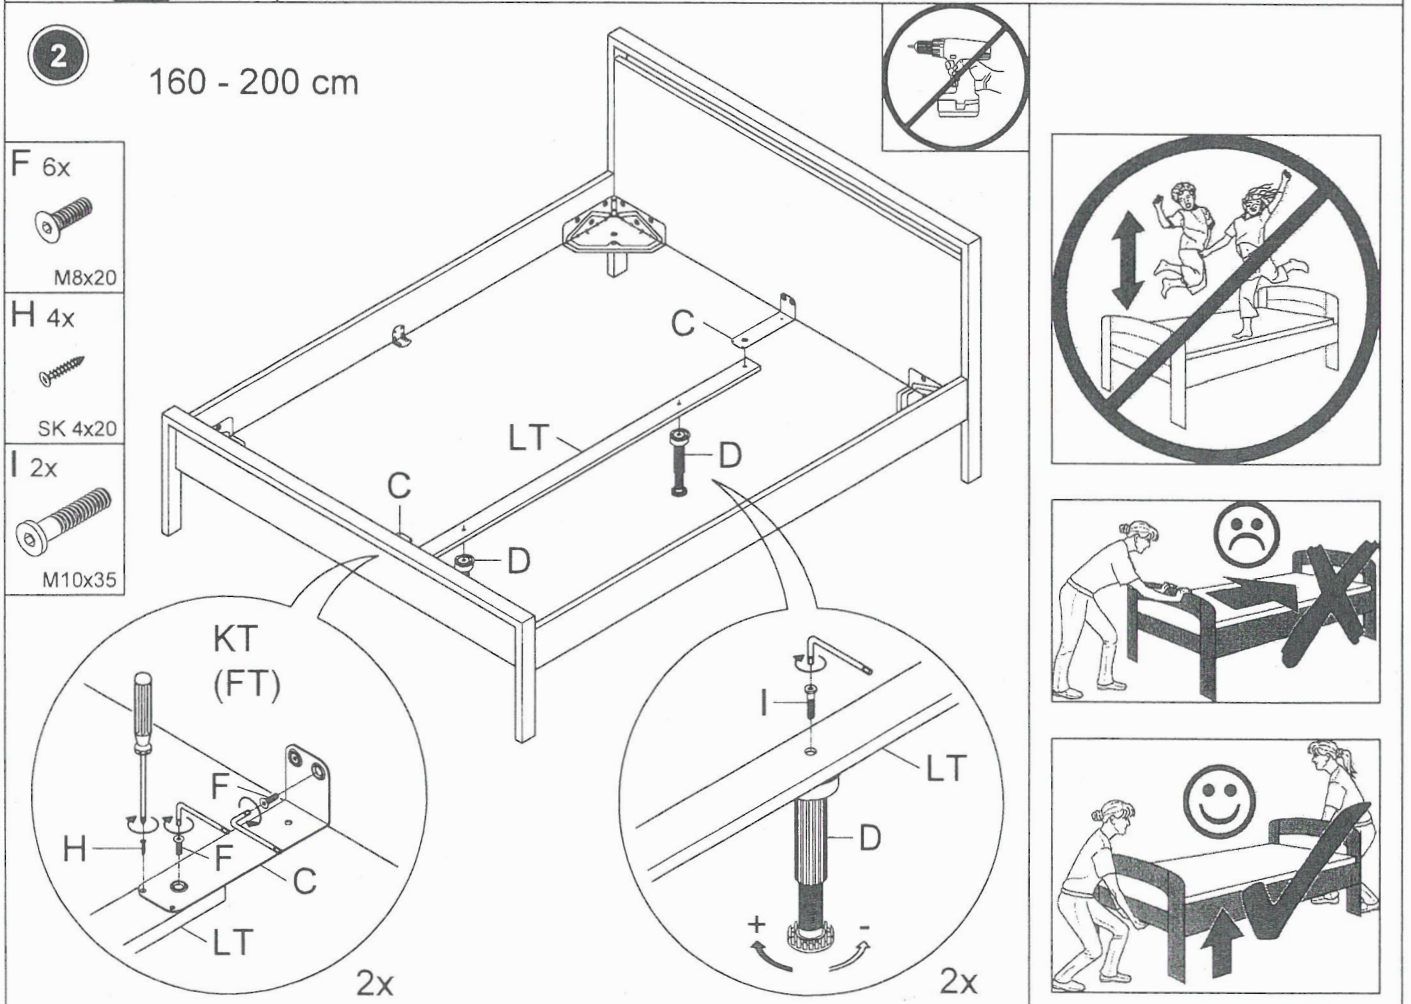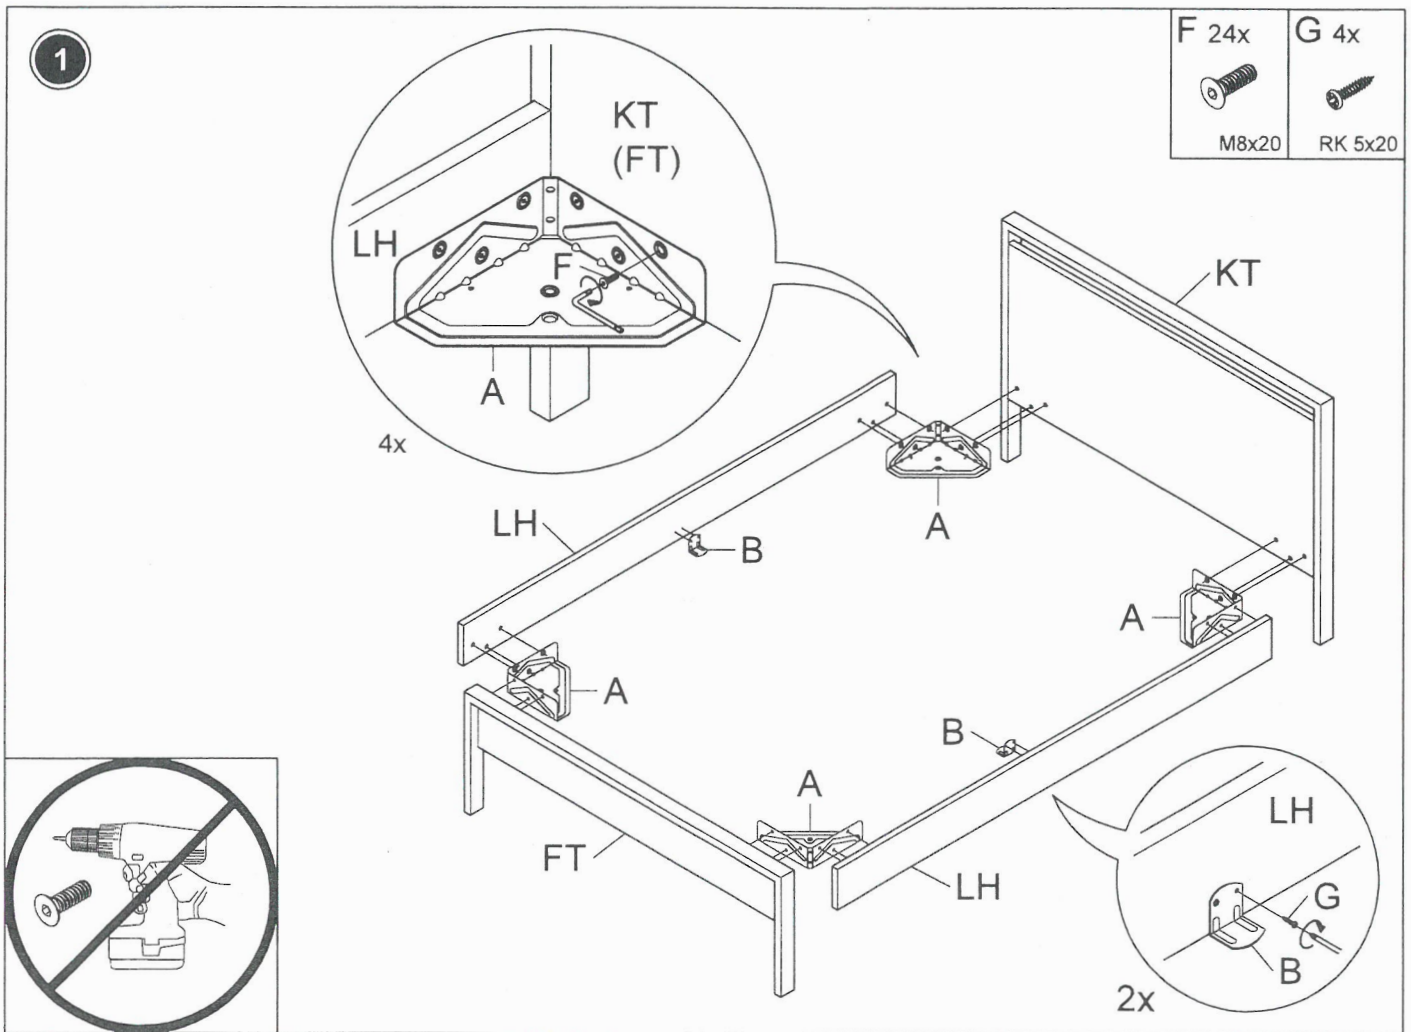


Verstärkungswinkel
 Equerres d'assemblage
 Placchette di rinforzo
 Reinforcement bracket




ca. 15 min

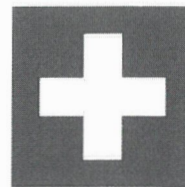

SWISS QUALITY

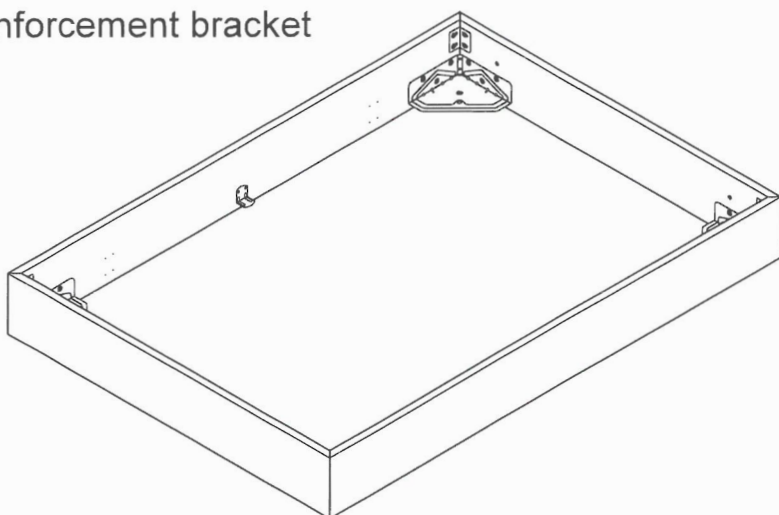

A 4x

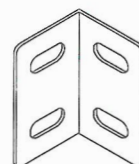

SW 5

B 16x






M8x20




MA.Be 0..



1

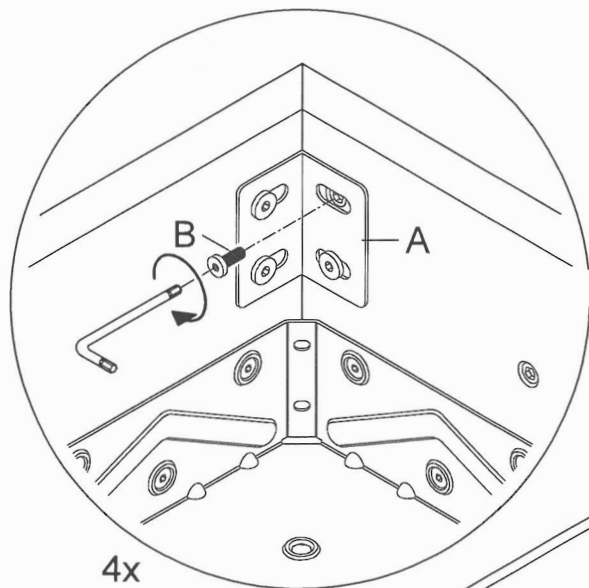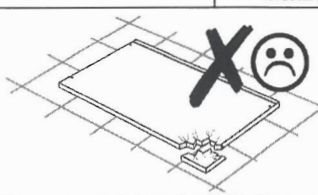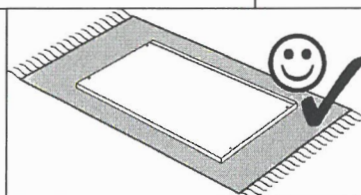

4x

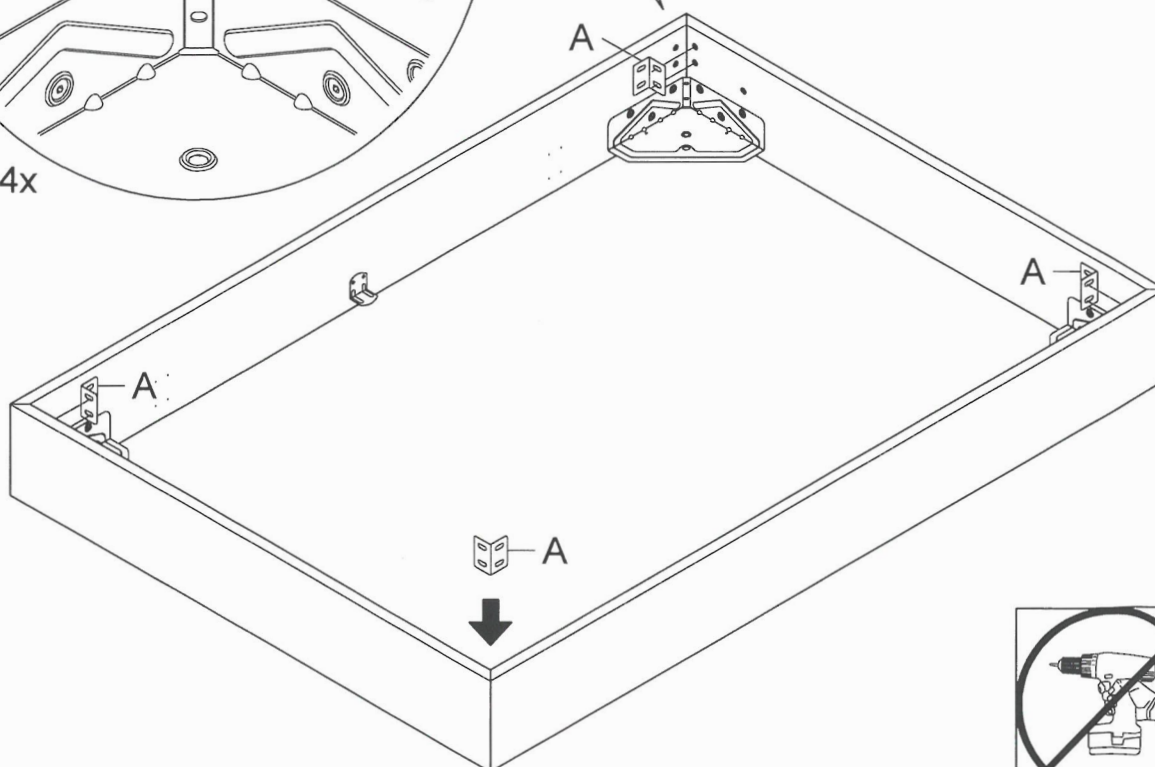

B 16x



M8x20

