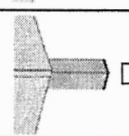
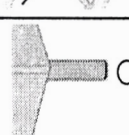
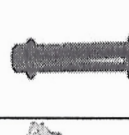
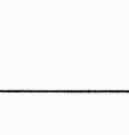

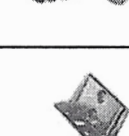
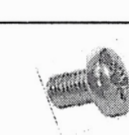
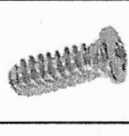
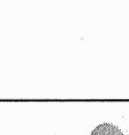
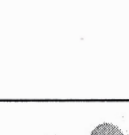
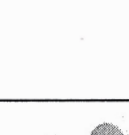
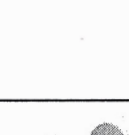
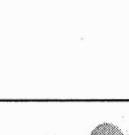
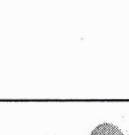
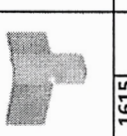
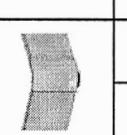
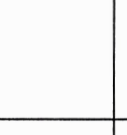
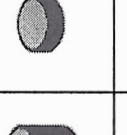
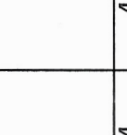
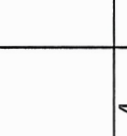
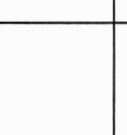
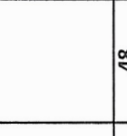
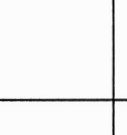
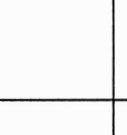
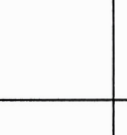
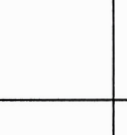
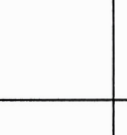
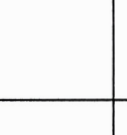
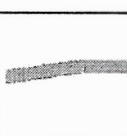
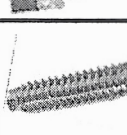
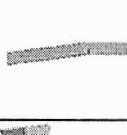


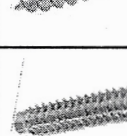
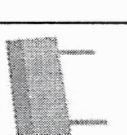
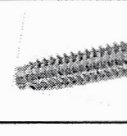
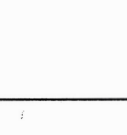
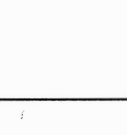
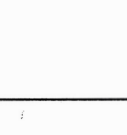
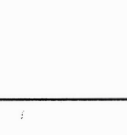
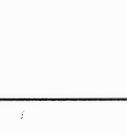
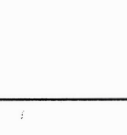
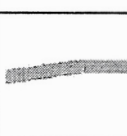
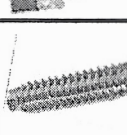
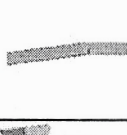


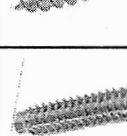
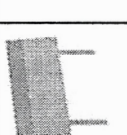
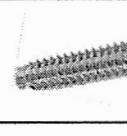
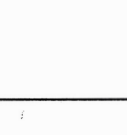
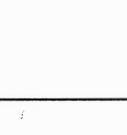
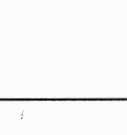
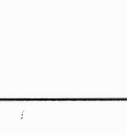
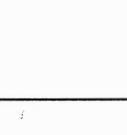
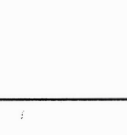


Stollenbett niedrig
Lit à pieds à barrettes basse

		Q01	F02	F03	F04	B03	B06	B07	S08	S09	S10	S11	S12
Artikel Article	  Querstrebe Entretroises	 Fuss	 Fuss	 Fuss	 Pieds	 Pieds	 Fuss	 Pieds	 PZ2 SK 5x20	 PZ3 PH M6x12	 PZ2 Euros. 6.3x15	 PZ2 Euros. 6.3x19	 PZ2 PH 5x20
Artikel Article	  Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 PZ2 SK 5x20	 PZ3 PH M6x12	 PZ2 Euros. 6.3x15	 PZ2 Euros. 6.3x19	 PZ2 PH 5x20
Artikel Article	  Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 Fuss	 PZ2 SK 5x20	 PZ3 PH M6x12	 PZ2 Euros. 6.3x15	 PZ2 Euros. 6.3x19	 PZ2 PH 5x20

Montageanleitung Kopfhäupter Tête de lit

		B14	S15	S15	S16	B14	B17	S15	S13	B14	S15	S16	
Artikel Article	  Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis	 Stütze Aquis