


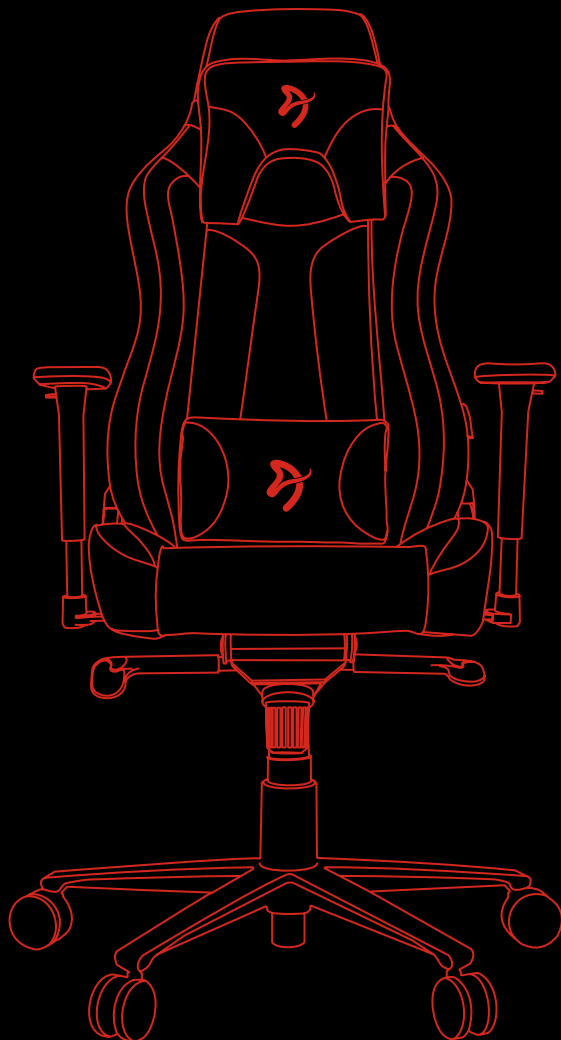
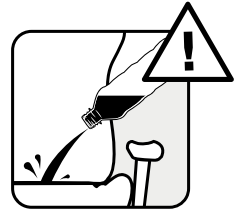
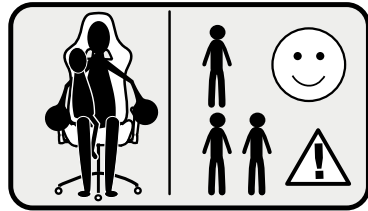
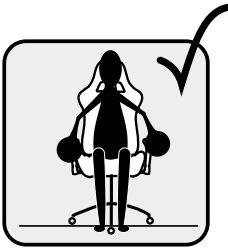
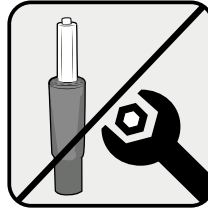
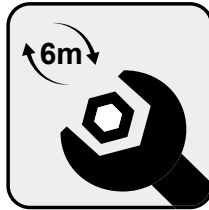


ASSEMBLY GUIDE


VERNAZZA & VERNAZZA SOFT FABRIC

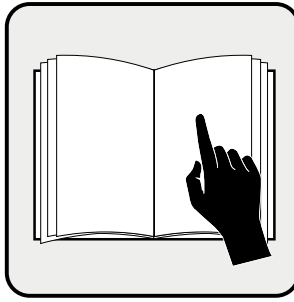

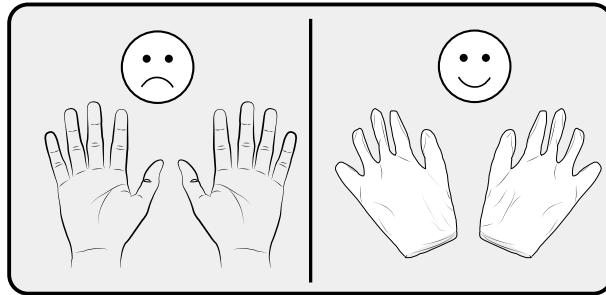

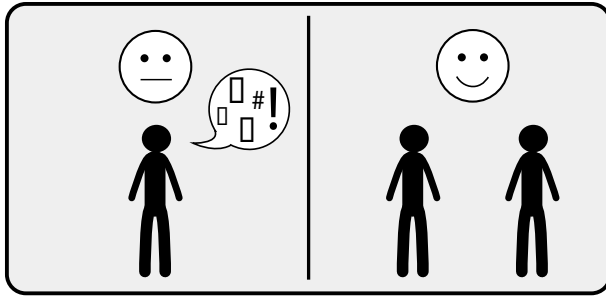

A



x8

B




x8

C




x8


1

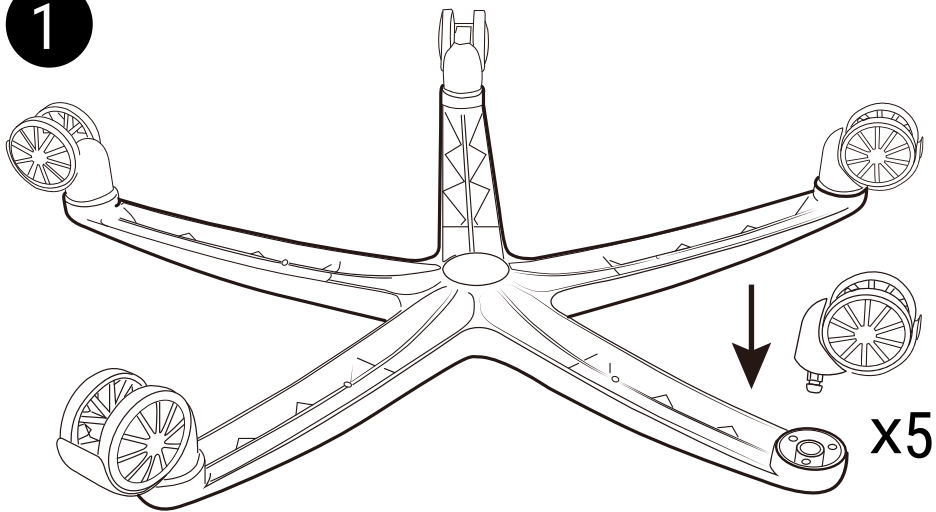


2

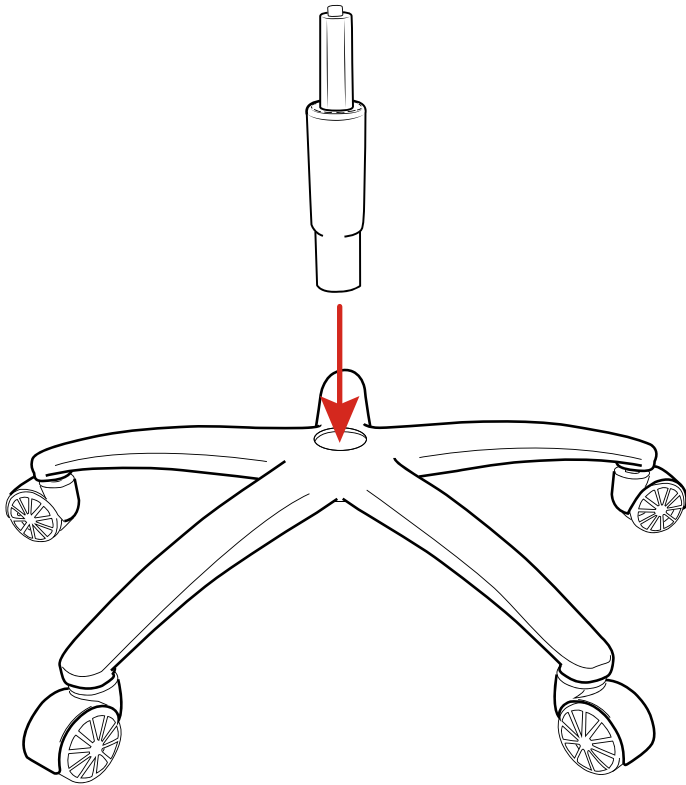


3

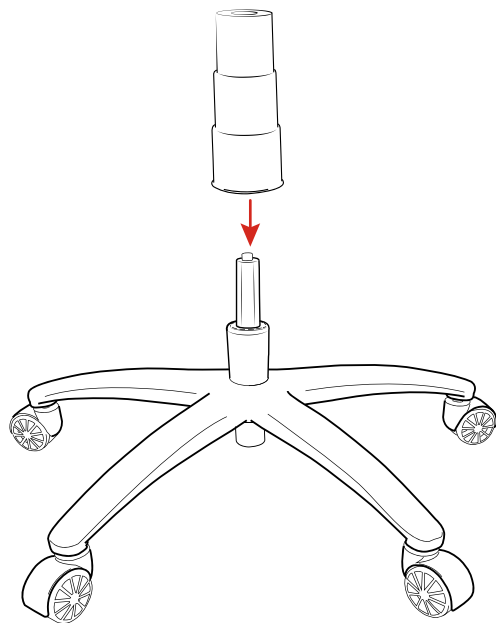


4






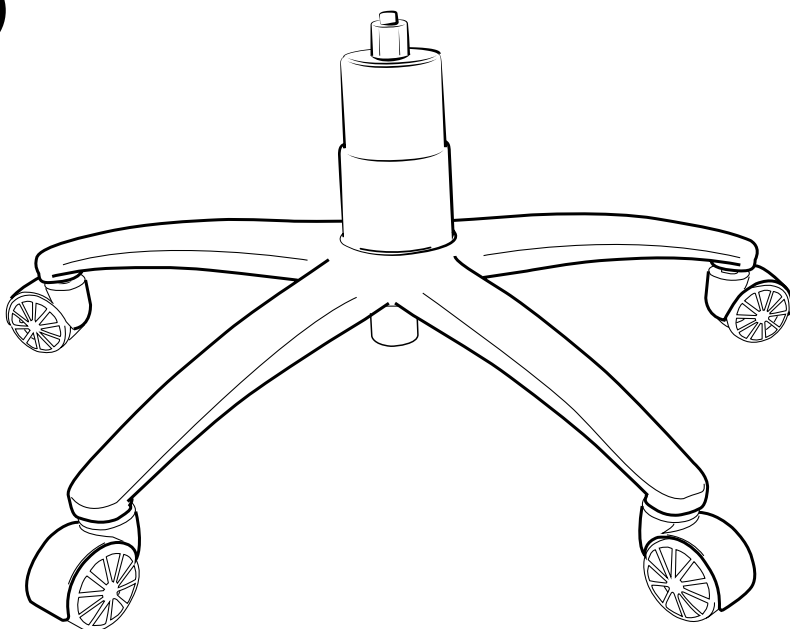


5

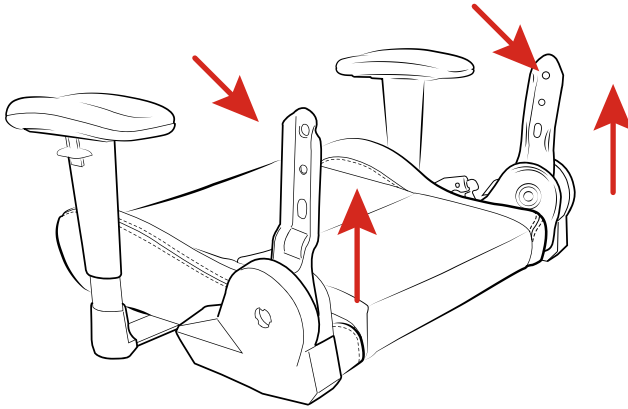


6

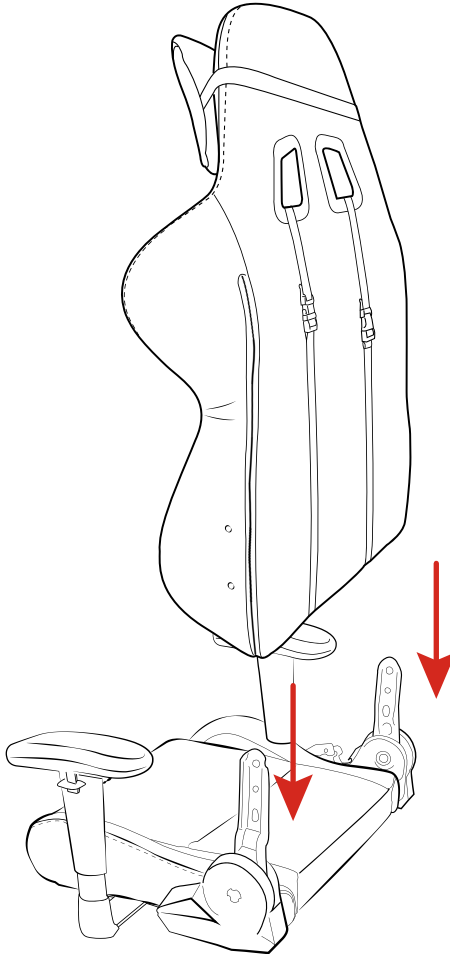


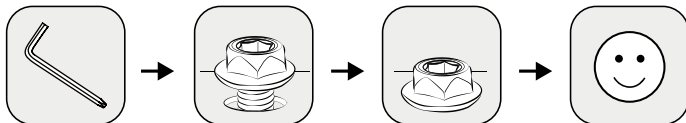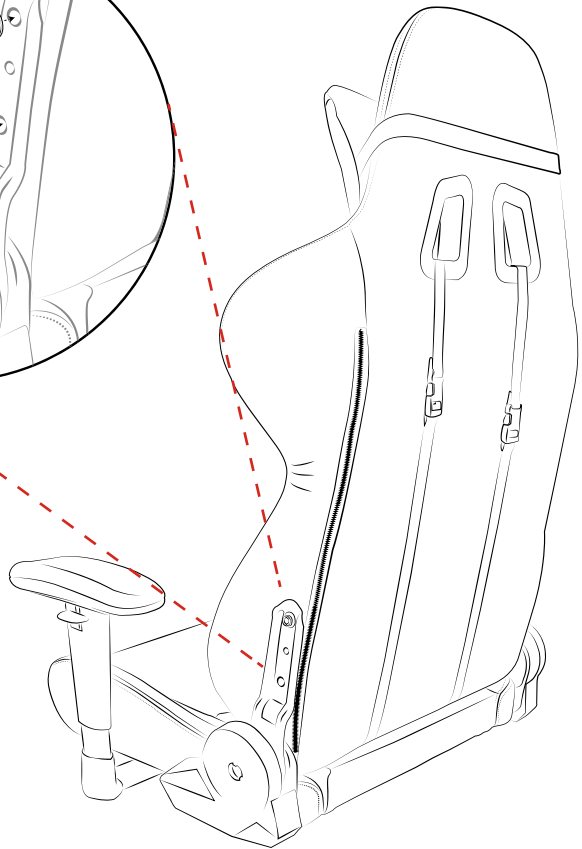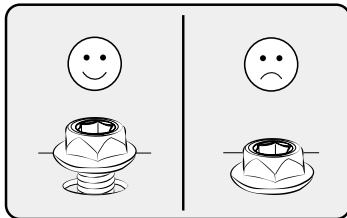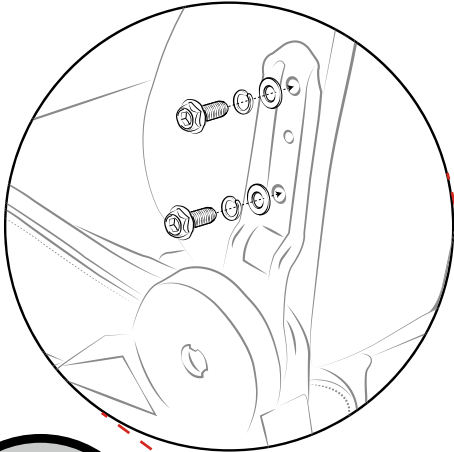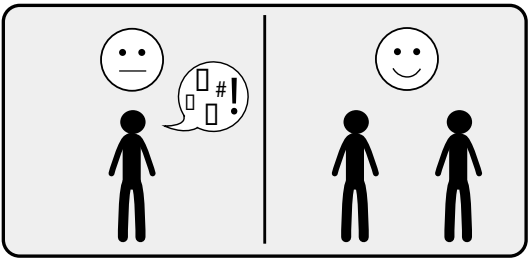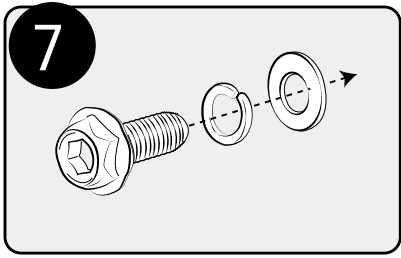

9

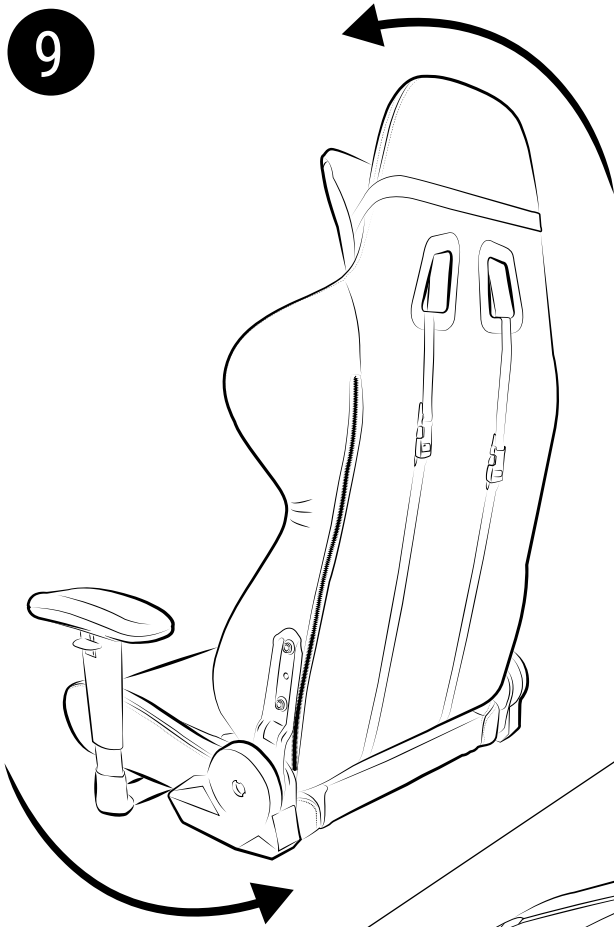





10

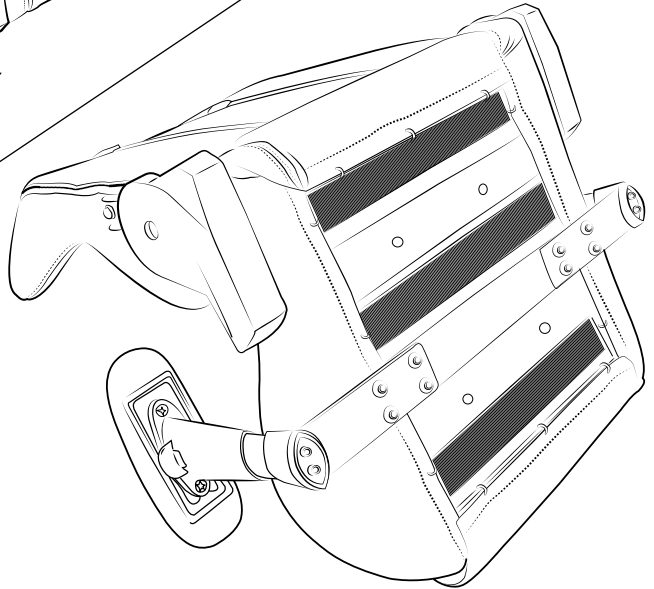



11




ATTENTION!

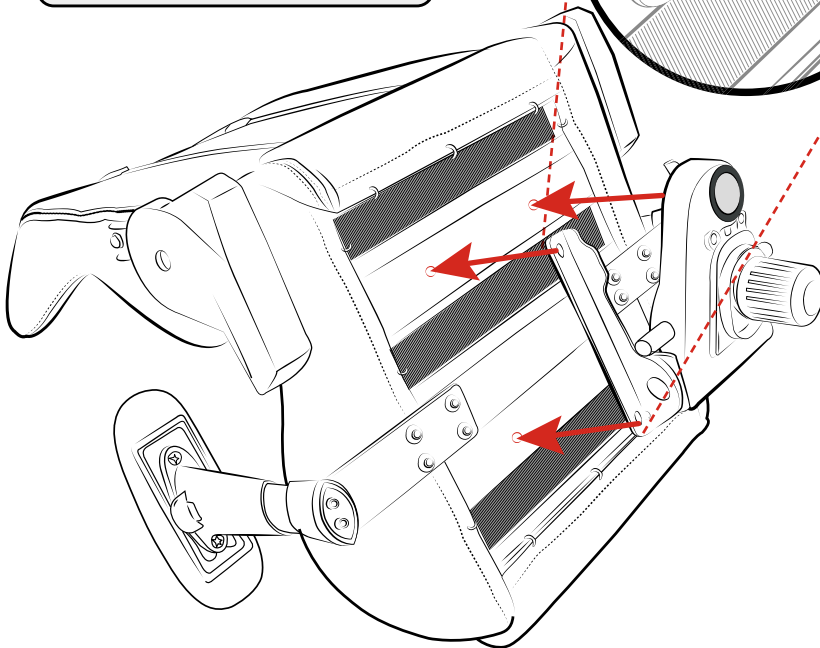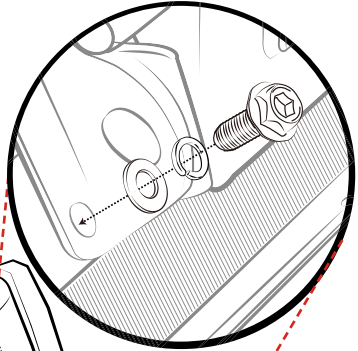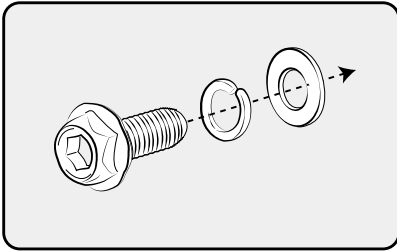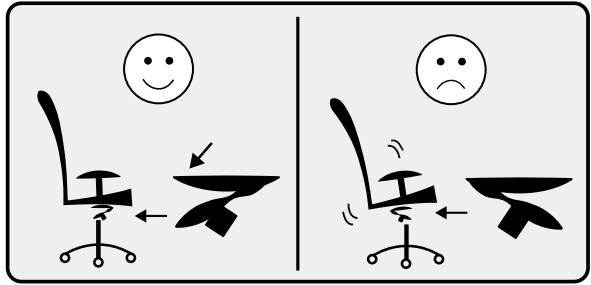

12

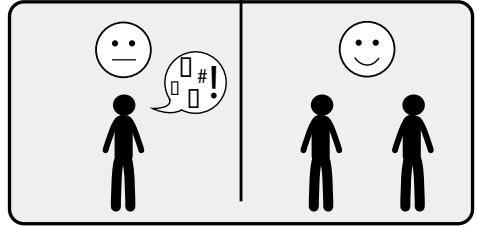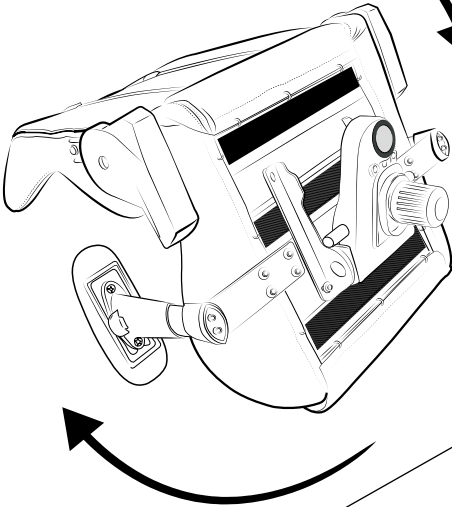

13

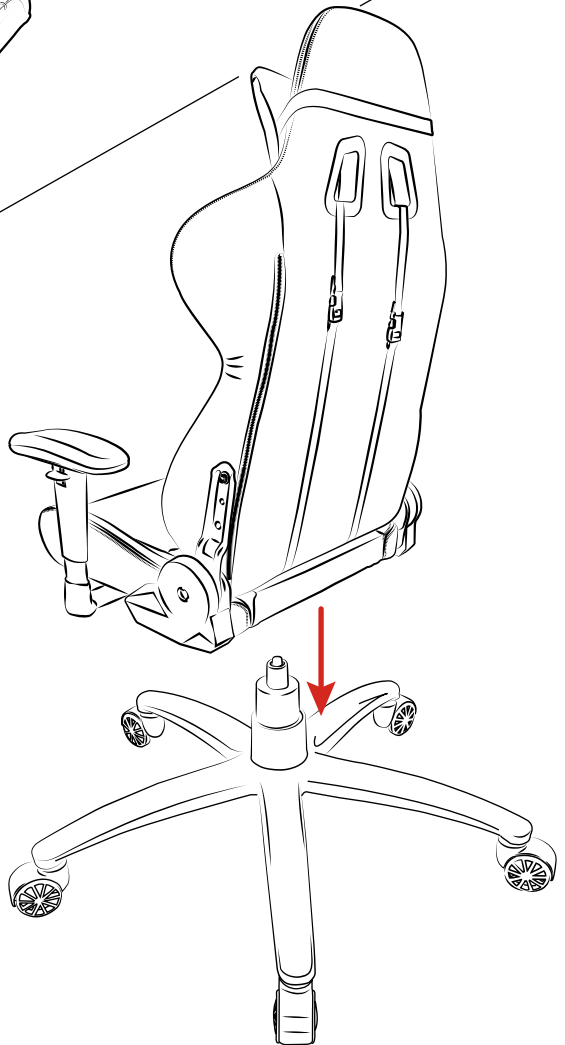

14

