

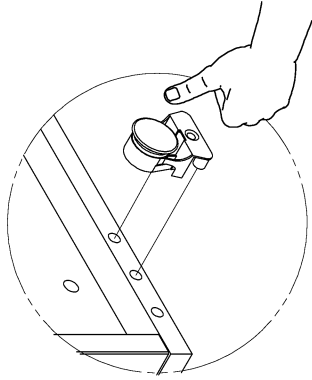


röhr

**Höhensteller
A01565.01**

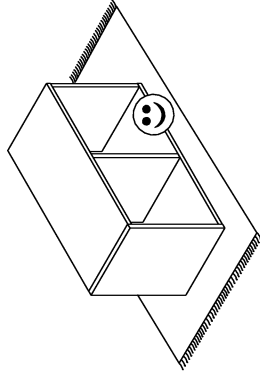


960283
(4 X)

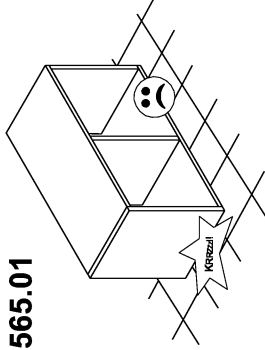



0280223

röhr

**Montageanleitung
A01565.02**

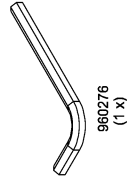

960276
(1 X)

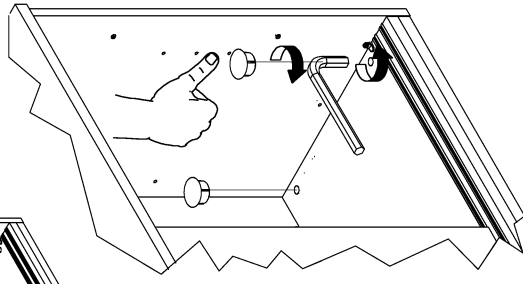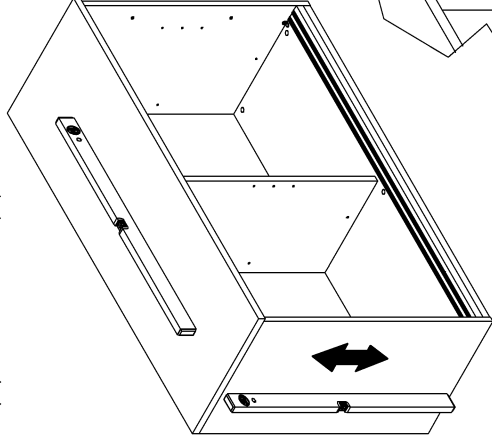


röhr

**Montageanleitung
A01565.03**







961388
(2 X)



960276
(1 X)



097214
(2 X)

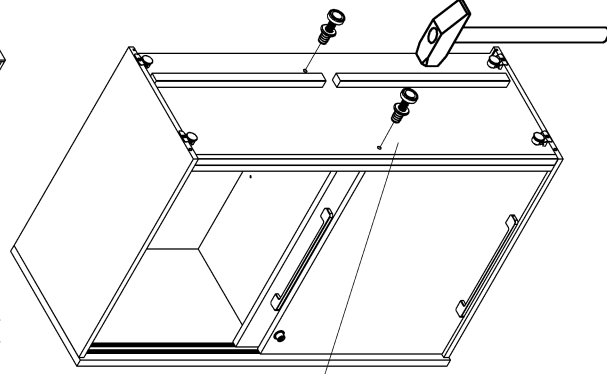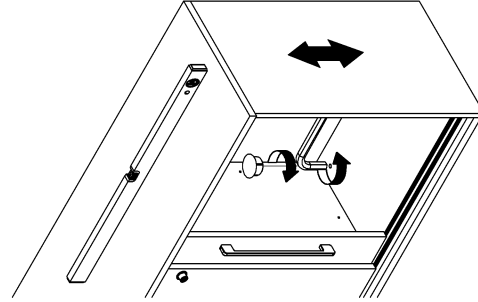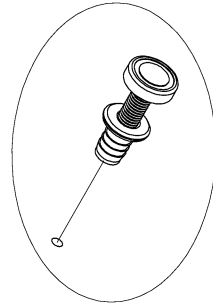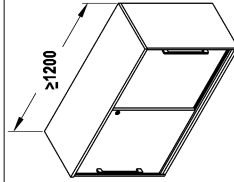


röhr




**Montageanleitung
A01565.04**



961388
(2 X)



960276
(2 X)

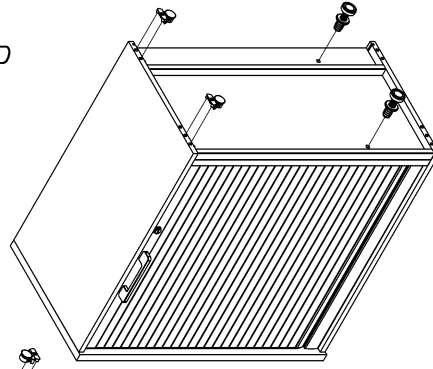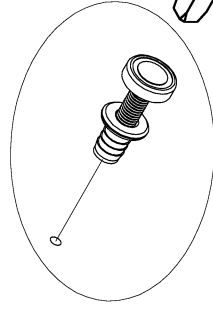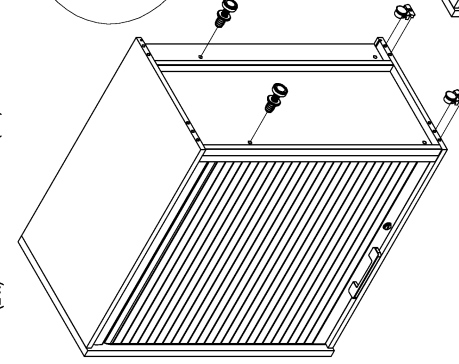

ACHTUNG!
Erst Türen ausrichten,
dann mit Liko 4,0x17 sichern!

