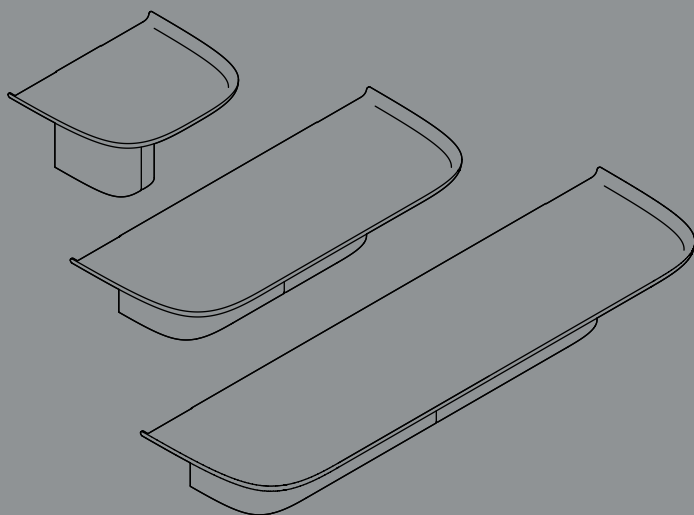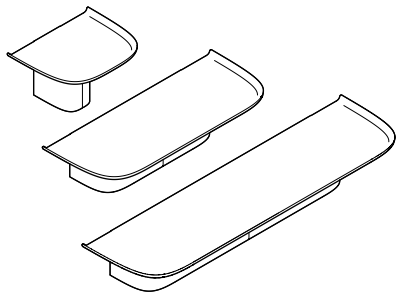# KORPUS SHELF

DESIGN BY ANDREAS BERGSAKER

KORPUS SHELF

DESIGN BY ANDREAS BERGSAKER

⚠️

The provided wall plugs and screws are designed for brick wall or solid concrete only. Please indentify your wall type before mounting and use alternative fastening hardware if needed. If in doubt, consult a professional.

⚠️

When properly mounted to the wall:

Total max. load:
10 kg/22 lbs

Max. load on each individual hook:
5 kg/11 lbs

Follow the illustrated guide on the opposite side of this page along with this written guide.

1. Identify the size of your shelf and mark where to drill holes accordingly.

2. Drill holes using a drill bit that fits the size of your screws/wall plugs. If you are using the provided wall plugs, use a 8 mm (5/16") drill bit.

3. Identify your wall type. If it is a brick wall or solid concrete, insert the provided wall plugs. Other wall types may require other types of fastening. Consult a professional if in doubt.

4. Insert the screws. Leave an 8 mm (5/16") gap for the shelf to hang on.

5. Mount the shelf to the screws.

6. Push the shelf down so that it hangs on the screws. Make sure to insert the screws in the designated cut-outs, and not behind the hooks.

7. Finally, tighten the screws, without using too much force.

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.
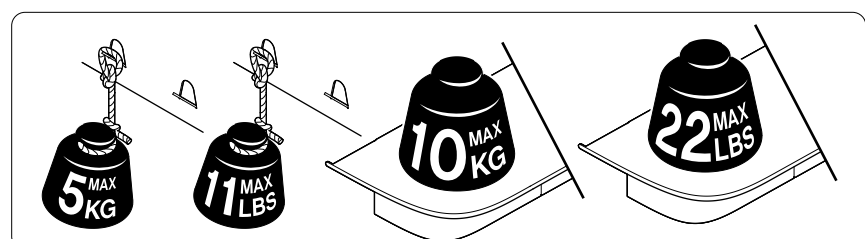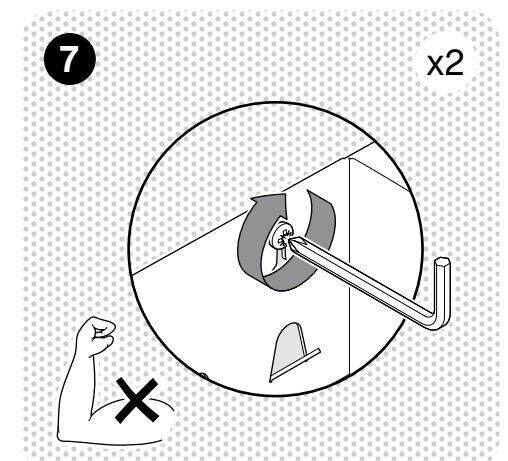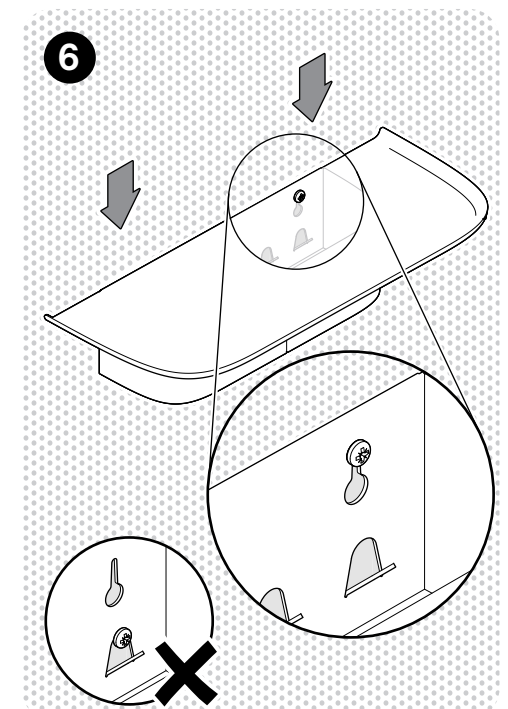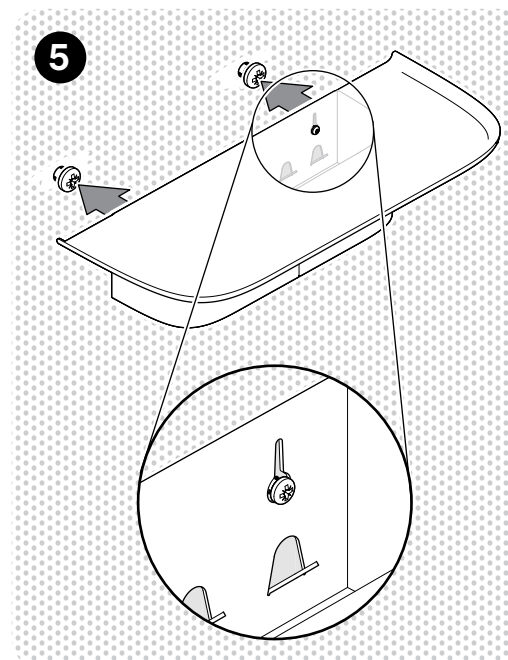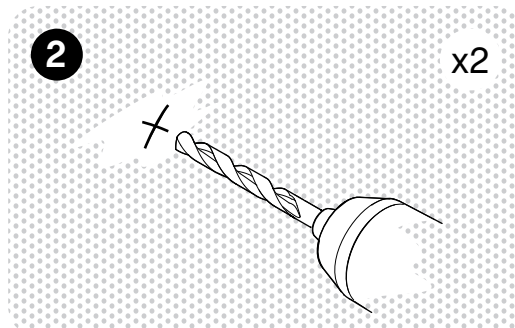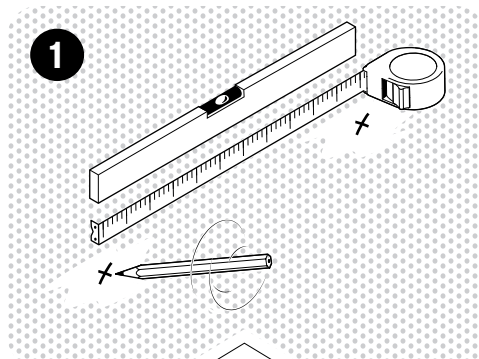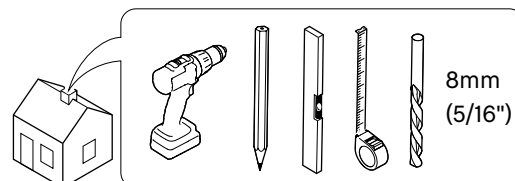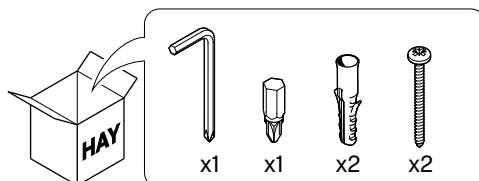
Please find our Care & Maintenance guide by scanning the QR code above.

You can find more relevant information on Korpus Shelf by scanning the QR code.

You can also find the same information at hay.dk/downloads

x1   x1   x2   x2

8mm (5/16")

1

9 cm (5½")

30 cm (11 13/16")

60 cm (23 9/16")

2 x2

3 x2

✓   ✓

⚠️   ⚠️

4 x2

8 mm (5/16")

5

6

✗

7 x2

✗

5 KG MAX   11 LBS MAX   10 KG MAX   22 LBS MAX

HAY

HAY